

# Instruction manual

Leak detector with camera

LD 500 / LD510



# 1 Table of Content

|            |   |           |
|------------|---|-----------|
| <b>1</b>   | <b>TABLE OF CONTENT .....</b>   | <b>2</b>  |
| <b>2</b>   | <b>SAFETY INSTRUCTIONS .....</b>  | <b>5</b>  |
| 2.1        | GENERAL SAFETY INSTRUCTION .....  | 5         |
| 2.2        | USING OF CLASS 2 LASER .....  | 5         |
| <b>3</b>   | <b>SERVICE AND MAINTENANCE .....</b>  | <b>6</b>  |
| <b>4</b>   | <b>ENVIRONMENTAL PROTECTION.....</b>  | <b>6</b>  |
| <b>5</b>   | <b>INTENDED USE .....</b>   | <b>6</b>  |
| <b>6</b>   | <b>TECHNICAL DATA LD50 .....</b>  | <b>7</b>  |
| <b>7</b>   | <b>IDENTIFICATION .....</b>   | <b>8</b>  |
| 7.1        | NAME PLATE .....  | 8         |
| 7.2        | LASER WARNING LABEL .....   | 8         |
| 7.3        | LABEL POSITIONS .....   | 8         |
| 7.3.1      | LD500 / LD510 (For Standard & Laser distance module) .....                      | 8         |
| 7.3.2      | Parabolic mirror .....  | 8         |
| <b>8</b>   | <b>DEVICE COMPONENTS AND CONTROLS .....</b>                                     | <b>9</b>  |
| 8.1        | THE LD 500 .....  | 9         |
| <b>9</b>   | <b>OVERVIEW AND APPLICATION DESCRIPTION OF THE DIFFERENT SENSOR TYPES .....</b> | <b>10</b> |
| 9.1        | ASSEMBLY WITH ACOUSTIC TRUMPET .....  | 11        |
| 9.2        | ASSEMBLY WITH FOCUS TUBE WITH FOCUS TIP .....                                   | 11        |
| 9.3        | ASSEMBLY WITH GOSSENECK .....   | 12        |
| 9.4        | ASSEMBLY WITH PARABOLIC MIRROR.....   | 12        |
| <b>10</b>  | <b>START-UP / / APPLICATION LD 500 .....</b>                                    | <b>13</b> |
| 10.1       | SWITCH ON .....   | 13        |
| 10.2       | HEADPHONE VOLUME UP / VOLUME DOWN .....   | 13        |
| 10.3       | SENSITIVITY LEVEL .....   | 13        |
| 10.4       | LASER ON/OFF .....  | 14        |
| <b>11</b>  | <b>OPERATION .....</b>  | <b>14</b> |
| 11.1       | INITIALIZATION .....  | 14        |
| 11.2       | SCREEN LEAKAGE .....  | 15        |
| 11.3       | HOME MENU LD 500.....   | 16        |
| 11.3.1     | Configuration of LD500 .....  | 17        |
| 11.3.1.1   | Sensortype selection (Measuring tool) .....                                     | 20        |
| 11.3.1.1.1 | Intelligentes Tool.....   | 20        |
| 11.3.1.1.2 | Sensortyp selection manual .....  | 20        |
| 11.3.1.2   | Storing of the measurement.....   | 21        |
| 11.3.1.3   | Parameter / Meas. Point (Re-Check) .....  | 21        |
| 11.3.1.4   | Fault description .....   | 22        |
| 11.3.1.5   | Storing measurement data to internal SD-card .....                              | 22        |
| 11.3.2     | Export/Import.....  | 23        |
| 11.3.2.1   | Export .....  | 24        |
| 11.3.2.1.1 | Export „Leakage Data“ .....   | 24        |
| 11.3.2.1.2 | Export of System settings.....  | 26        |
| 11.3.2.2   | Import .....  | 27        |
| 11.3.2.2.1 | Import of system settings .....   | 27        |
| 11.3.2.2.2 | Import new measurement tool.....  | 28        |
| 11.3.2.3   | Export / Import Customer database .....   | 29        |
| 11.3.3     | View bitmaps.....   | 30        |
| 11.3.4     | Device Settings .....   | 31        |
| 11.3.4.1   | Passwort-Einstellung .....  | 31        |

|              |  |           |
|--------------|--|-----------|
| 11.3.4.2     | Device Settings .....  | 32        |
| 11.3.4.2.1   | Language .....   | 32        |
| 11.3.4.2.2   | Date & Time .....  | 33        |
| 11.3.4.2.3   | SD-Card .....  | 33        |
| 11.3.4.2.4   | System update .....  | 34        |
| 11.3.4.2.5   | Check for Updates.....   | 34        |
| 11.3.4.2.6   | Update Channels.....   | 35        |
| 11.3.4.2.7   | Factory Reset .....  | 35        |
| 11.3.4.2.7.1 | Reset to default settings.....   | 35        |
| 11.3.4.2.8   | Unique USB ID .....  | 35        |
| 11.3.4.2.9   | Calibration of touchpanel .....  | 36        |
| 11.3.4.2.10  | Set backlight brightness .....   | 37        |
| 11.3.4.2.11  | Cleaning .....   | 38        |
| 11.3.4.2.12  | System-Status .....  | 38        |
| 11.3.4.2.13  | About LD 500 .....   | 38        |
| <b>12</b>    | <b>ACCESS TO LOCAL WEB SERVER VIA WLAN .....</b>                                 | <b>39</b> |
| 12.1         | ESTABLISHING A CONNECTION .....  | 39        |
| 12.1.1       | Connection via WLAN.....   | 40        |
| 12.1.2       | Connection via WLAN hotspot .....  | 43        |
| 12.2         | ACCESSING THE LOCAL WEB SERVER.....  | 45        |
| 12.2.1       | User interface web server .....  | 46        |
| 12.2.2       | Exporting leakage data.....  | 47        |
| <b>13</b>    | <b>CHARGING THE BATTERIES .....</b>  | <b>48</b> |
| <b>14</b>    | <b>UPDATING THE DEVICE SOFTWARE .....</b>  | <b>49</b> |
| <b>15</b>    | <b>LD 510 .....</b>  | <b>51</b> |
| 15.1         | SELECTION EXTERNAL SENSOR .....  | 51        |
| 15.2         | INPUT SIGNALS OF EXT. SENSOR LD510 .....   | 52        |
| 15.3         | CABLE CROSS SECTION .....  | 52        |
| 15.3.1       | Sensor circuit points/Output signal:.....  | 52        |
| 15.4         | CONNECTION DIAGRAMS FOR DIFFERENT SENSOR TYPES.....                              | 53        |
| 15.4.1       | Connector pin assignment for all sensors at the LD510 .....                      | 53        |
| 15.4.2       | Connection for CS dew point- and consumption sensors, series FA/VA 5xx .....     | 54        |
| 15.4.3       | Connection with RS485.....   | 54        |
| 15.4.4       | Three- and four-wire power supply 0 - 1/10/30 VDC .....                          | 54        |
| 15.4.5       | Analogue two-, three-, and four-wire current signal.....                         | 55        |
| 15.4.6       | Two-, three- and four-wire connector pin assignments for PT100/PT1000/KTY81..... | 56        |
| 15.5         | DEW POINT SENSOR FA 500 / FA 510 (RS 485 MODBUS).....                            | 57        |
| 15.5.1       | Settings Dew point sensor FA 500 / FA 510.....                                   | 58        |
| 15.5.1.1     | Unit selection for temperature and humidity.....                                 | 58        |
| 15.5.1.2     | Definition of the System pressure (relative pressure value).....                 | 58        |
| 15.5.1.3     | Definition of Reference pressure (absolute pressure value) .....                 | 59        |
| 15.5.1.4     | Field adjustment .....   | 59        |
| 15.5.1.5     | More Settings Analogue output 4-20mA .....                                       | 60        |
| 15.6         | FLOW SENSOR OF TYPE VA 5xx / VD500 (RS 485 MODBUS) .....                         | 61        |
| 15.6.1       | Settings for Flow sensor VA 5xx .....  | 62        |
| 15.6.1.1     | Diameter settings (only for VA 500 or VA 550).....                               | 62        |
| 15.6.1.2     | Gas Constant settings .....  | 63        |
| 15.6.1.3     | Definition of the reference conditions .....                                     | 64        |
| 15.6.1.4     | Definition Unit of flow and velocity.....  | 64        |
| 15.6.1.5     | Definition consumption counter value and consumption unit .....                  | 65        |
| 15.6.1.6     | Settings analogue output 4-20mA of VA 5xx .....                                  | 66        |
| 15.6.1.7     | Settings Pulse / Alarm output of VA 5xx .....                                    | 67        |
| 15.6.1.8     | Settings ZeroPoint or Low Flow Cut off for VA 5xx .....                          | 69        |
| 15.7         | TYPE MODBUS .....  | 70        |
| 15.7.1       | Selection and activation of Sensor-Type Modbus .....                             | 70        |
| 15.7.1.1     | Modbus Settings .....  | 70        |
| 15.8         | DATA LOGGER SETTINGS .....   | 74        |
| <b>16</b>    | <b>SCOPE OF DELIVERY.....</b>  | <b>78</b> |


|           |                         |           |
|-----------|-------------------------|-----------|
| <b>17</b> | <b>APPENDIX.....</b>    | <b>79</b> |
| 17.1      | REPORT UN 38.1.....     | 80        |
| 17.2      | REPORT IEC62133-2 ..... | 81        |

## 2 Safety instructions



### About this document

- Read this documentation carefully and familiarize yourself with the product before using it. Pay particular attention to the safety and warning instructions to prevent injury and product damage.
- Keep this documentation handy for future reference.
- Share this documentation with future users of the product.

### 2.1 General safety instruction

|   |  |
|---|--|
|  | <ul style="list-style-type: none"> <li>• The product is to be used only in accordance with the intended purpose and within the parameters specified in the technical data. Do not use force for operation.</li> <li>• Never measure with the device at or near live/energized parts!</li> <li>• During leak detection on electrical systems, please maintain a sufficient safety distance to avoid dangerous electric shocks!</li> <li>• Avoid any direct contact with hot and/or rotating parts.</li> <li>• Always switch on the device before putting on the headphones! At high signal levels (bar graph headphones in the red area), the volume can be correspondingly large. The sensitivity setting can be used to reduce the volume.</li> <li>• Observe the prescribed storage and operating temperatures.</li> <li>• In case of improper handling or violence, the warranty claims are lost.</li> <li>• Interventions on the device of any kind, unless they correspond to the intended and described procedures, lead to the expiration of warranty and to the disclaimer.</li> <li>• The device is intended solely for the described purpose.</li> </ul> |
|---|--|

### 2.2 Using of class 2 laser

|   |   |
|---|---|
|  | <ul style="list-style-type: none"> <li>• Never point the laser directly towards persons!</li> <li>• Absolutely avoid a direct irradiation of the eyes of humans and animals!</li> <li>• If a person's eyes are exposed to class 2 laser radiation, they should shut their eyes and immediately move away from the beam</li> <li>• Do not stare into the beam</li> <li>• Laser module: corresponds to DIN EN 60825-1: 2014 Class 2 (&lt;1mW / 635nm)</li> <li>• Laser output point trumpet and parabolic mirror:</li> </ul> <div data-bbox="384 1682 1565 2047">  <div data-bbox="478 1921 802 2027" style="border: 1px solid black; padding: 2px;"> <b>Laseraustrittsstelle<br/>Laser output point</b> </div> <div data-bbox="1249 1865 1565 1966" style="border: 1px solid black; padding: 2px;"> <b>Laseraustrittsstelle<br/>Laser output point</b> </div> </div> |
|---|---|

### 3 Service and maintenance

Service and maintenance work must only be carried out by authorized personnel.

### 4 Environmental protection



- Disposal of defective batteries / dead batteries according to the valid legal regulations.
- After the end of the useful life, take the product to the separate collection for electrical and electronic equipment (observe local regulations) or return the product to CS INSTRUMENTS GmbH & Co.KG for disposal.

CS INSTRUMENTS GmbH & Co.KG makes no warranty as to its suitability for any particular purpose and assumes no liability for any errors contained in this manual. Nor for consequential damages in connection with the delivery, performance or use of this device.

#### **The following accumulator is contained in this electrical appliance**

| Battery type | Chemical system |
|--------------|-----------------|
| Akkumulator  | LiIon 2S1P      |

#### **Information on the safe removal of the batteries or accumulators**

- Warning: Make sure that the battery is completely empty.
- Removing the battery



Removing the battery cover



Disconnecting the connector



Carefully pull out the battery

- Carefully remove the accumulator
- The accumulator and the appliance can now be disposed of separately

### 5 Intended use

The LD 500 is a leak detector for quick and reliable leak detection in/on compressed air systems.

The LD500 leak detector evaluates the ultrasonic waves generated by the leakage based on distance and pressure.

It is solely designed and constructed for the intended use described here and may only be used for this purpose.

The user must verify that the device is suitable for the intended use. The technical data listed in this datasheet are binding.


Improper handling or operation outside the technical specifications is not permitted. Claims of any kind for damages arising from improper use are excluded.

## 6 Technical data LD50


|                              |   |
|------------------------------|---|
| Dimensions hand-held housing | 263 x 96 x 280 mm (with preamp module and acoustic trumpet)   |
| Weight                       | 0.55 kg with preamp module and acoustic trumpet, complete set in case approx. 3.0 kg                        |
| Operating frequency          | 40 kHz (+/-2 kHz)   |
| Power supply                 | Internal 7.2 V lithium-ion battery  |
| Operating time               | > 9 h (continuous operation)  |
| Charging                     | ext. battery charger (included in scope of delivery)  |
| Charging time                | max.4 h   |
| Laser                        | Wavelength 630–660nm, output power < 1mW (laser class 2)  |
| Connections                  | 3.5 mm stereo jack for headset,<br>Power supply socket for connecting an external charger<br>USB connection |
| Colour screen                | 3.5" touch panel TFT transmissive   |
| Interface                    | USB for data export/import, SW update, etc.   |
| Data logger                  | 16GB memory card storage (micro SD class 4)   |
|                              |   |
| Application Area             | Indoor use  |
| Operating temperaturer       | -5 °C bis +50 °C  |
| Storage temperature          | -20 °C to +60 °C  |
| Altitude                     | Up to 4000m above sea level   |
| Max. Humidity                | <95% rH, without condensation   |
| Pollution degree             | 2   |
| Protection class             | IP20  |

## 7 Identification

### 7.1 Name plate

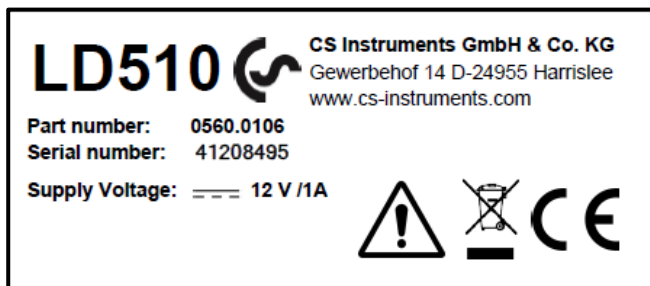

### 7.2 Laser warning label

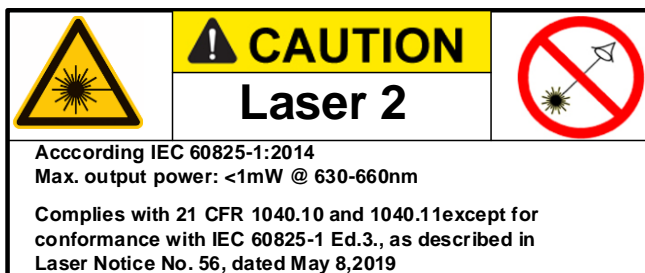

### 7.3 Label positions

#### 7.3.1 LD500 / LD510 (For Standard & Laser distance module)



#### 7.3.2 Parabolic mirror





## 8 Device components and controls





### 8.1 The LD 500



3.5mm jack for the  
headphone



## 9 Overview and application description of the different sensor types

| Acoustic trumpet (standard tool)   | Straightening tube  |
|--|---|
|  <p>The acoustic trumpet bundles incident ultrasonic waves, thereby extending the range of the device. This behaviour makes it ideal for medium distances. The leakage can be heard from large distances, for precise detection, the user must approach the leakage and consistently follow the "loudest" point. Individual compressed air components are then checked for precise detection.</p> <p>Quantification distance (distance) □ 1 – 6 m</p> <p><b>Use of acoustic trumpet:</b></p> <ul style="list-style-type: none"> <li>• Average distance to pipe/component 0.2 - 6 m</li> <li>• Low interfering noise</li> <li>• Leakage freely accessible</li> <li>• Use at distances of up to 6 metres if no parabolic mirror available</li> </ul>  |  <p>The straightening tube permits only very few ultrasonic waves to pass in the direction of the ultrasonic transducer, allowing leakages to be located very precisely.</p> <p>For this reason, the use of the straightening tube is recommended for small distances, for the precise detection of the corresponding leakage.</p> <p><b>Quantification distance:</b> 0...0,2 m</p> <p><b>Use of focus tube:</b></p> <ul style="list-style-type: none"> <li>• Short distance to pipe/component 0.05 m</li> <li>• Pipe/component freely accessible</li> <li>• Pipes and components to be inspected are very close together</li> <li>• Medium to high noise</li> <li>• Use when no gooseneck available</li> </ul>   |
| Gooseneck  | Parabolic mirror  |
|  <p>The gooseneck should be used if the pipes and components to be inspected are physically very close. In addition, the shape of the gooseneck can be flexibly adapted to easily inspect hard-to-reach pipes and components.</p> <p>The sensitivity of the gooseneck has been reduced to dampen noise. This makes it ideal for target-ed, local testing of compressed air components at high noise levels, for example in systems using pneumatic cylinders and in compressed air distribution cabinets</p> <p><b>Quantification distance</b> → 0 ...0.05m</p> <p><b>Use of gooseneck:</b></p> <ul style="list-style-type: none"> <li>• Short distance to pipe/component 0.05 m</li> <li>• Leakage not freely accessible</li> <li>• Medium to high ultrasonic noise</li> <li>• Pipes and components to be inspected are very close together</li> </ul> |  <p>The parabolic mirror bundles horizontally incident ultrasound in its focal point where the ultrasonic transducer is located. On the one hand, this leads to a considerable amplification of the measured ultrasound (high range) and, on the other hand, to a very precise directional behaviour, since ultra-sound that does not incident horizontally is reflected by the reflector.</p> <p>The combination of these two characteristics enables the parabolic mirror to precisely locate leaks at large distances.</p> <p><b>Quantification distance</b> → 3 – 12 m</p> <p><b>Use of parabolic mirror:</b></p> <ul style="list-style-type: none"> <li>• Large distance to pipe/components 3 – 15 m</li> <li>• Interfering noise</li> <li>• Leakage not freely accessible (behind a fence)</li> <li>• Near leaks (superimposition))</li> </ul> |

### 9.1 Assembly with acoustic trumpet

The acoustic trumpet allows acoustic amplification by bundling the sound waves and specifies the location of the leak. Due to the special construction of the integrated laser pointer is still usable. The camera is integrated on the bottom of the acoustic trumpet and is electrically connected to the preamplifier module via the jack plug.

Assembling is done by plugging the individual components until easy locking audible (plug in to the stop).

The components are removed in the reverse order; for unlocking the preamplifier module, the release button must also be pressed.



Standard



with laser distance module

### 9.2 Assembly with focus tube with focus tip

The focus tube with focus tip is used to detect very small leaks, to accurately locate them.

Just like the acoustic trumpet, the tube can be plugged into the preamplifier with ultrasonic receiver. The use of the camera is **no longer** possible.

The components are removed in the reverse order; for unlocking the preamplifier module, the release button must also be pressed.



### 9.3 Assembly with Gooseneck

Due to its flexibility, the gooseneck tool is used for punctual measurements in hard-to-reach areas. Connection to the LD 500 is via the supplied spiral cable, see Figure 10.

It is **no longer** possible to use the camera.

To remove the component, remove the connection cable by pressing the release button on both sides and pulling off the cable.



### 9.4 Assembly with Parabolic mirror

The parabolic mirror is used for measurements at greater distances as well as for high requirements regarding selectivity and location of leakage positions.

Connection to the LD 500 is via the supplied spiral cable, see Figure 11.

To remove the component, remove the connection cable by pressing the release button on both sides and pulling off the cable.



**Note:** To use the parabolic mirror and gooseneck, these components must be activated in the LD 500 during initial commissioning in order to save the component-specific adjustment parameters. If this has not already been done ex-works, the data for this is supplied via USB stick. For the activation (parameter import), see chapter 11 Operation here in Sub chapter "Export / Import". The parabolic reflector 2.0 and the gooseneck 2.0 are automatically recognised by an intelligent LD 500, so you do not need to import it..

## 10 Start-up / / Application LD 500



Please first observe the safety instructions in Chapter 2

### 10.1 Switch on

Hold down the power button for about 1 second, the power will turn on, and a start-up sequence will appear on the display. Pressing the button again switches the device off again.

On-Off button, see [device components and controls](#)

### 10.2 Headphone Volume Up / Volume Down

The volume up and volume down buttons in the headset can be increased or decreased in 16 steps. Continuously pressing the button automatically increases / decreases the value.

Volume up / down buttons for headphone volume, see [device components and controls](#)



Please make sure the headphone level is <50% before putting on the headphones.

### 10.3 Sensitivity level

Ultrasound levels can be understood as a "loudness" of the leakage.

With the "Sensitivity" button, the sensitivity of the LD500 can be adjusted to the environment, which strongly influences the acoustic behavior of the device and increases or decreases the valid value range. A reduction in sensitivity reduces the range of the leakage reading but the "responding area", indicated by the circle in the display, also gets smaller, which considerably simplifies detection.

#### Sensitivity levels

**0 – 60 dB** = Highest sensitivity level of the device (use with small leaks and no noise), selection with the "**HiSn**" button or the "**Sensitivity**" button

**10 – 70 dB** = Leakages and noises get "less noisy", the range is reduced.

**20 – 80 dB** = Leakages and noises get "less noisy", the range is reduced.

**30 – 90 dB** = Leakages and noises get "less noisy", the range is reduced.

**40 – 100 dB** = Most insensitive stage (large leaks, many noises → for heavy-duty application)


**50 – 110 dB** = leakage and noise become "quieter", the range is reduced..


**60 – 120 dB** = least sensitive level (large leakages, a lot of noise for a heavy-duty application).

Whether the levels 50 - 110 / 60 - 120 dB are available depends on whether the LD 500 and the sensor are intelligent.

By default, the LD500 is set to the auto function and will automatically switch between levels (10 – 70 dB to 40 – 100 dB).

## 10.4 Laser On/Off

The laser pointer can only be switched on or off via the laser on / off button  in the display (not via the membrane keypad). When switched on, the display shows a laser warning symbol.

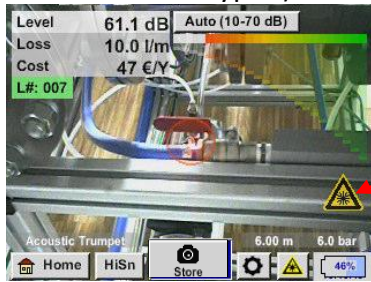

Laser „On“  
Icon



**Please note the warnings for laser operation!**  
**Avoid direct / indirect (via reflexion) irradiation of the eyes in humans and animals!**

## 11 Operation


The operation is largely self-explanatory and menu-driven via the touch panel.

The selection of the respective menu items occur via short "tapping" with the finger or a soft round pen.

**Attention:** Please use no pens or other objects with sharp edges!  
The foil can be damaged!

Inputs or changes can be made with all white deposit fields

### 11.1 Initialization

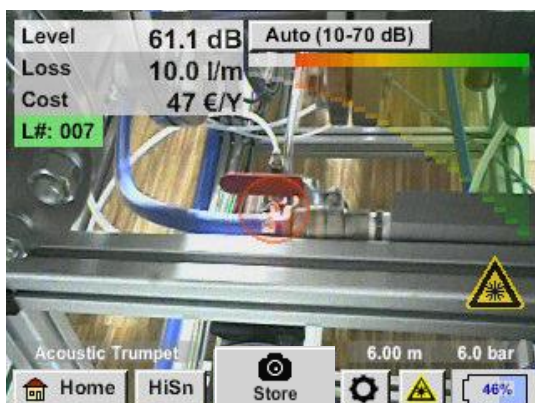

After switching on the LD 500, the initialization takes place and then switch to leakage display



## 11.2 Screen Leakage


The following picture shows and describes the display elements.

Displayed values for:

- Signal-Level in dB
- Leakage size
- Leakage costs per year

LeakTag number

Actual camera image

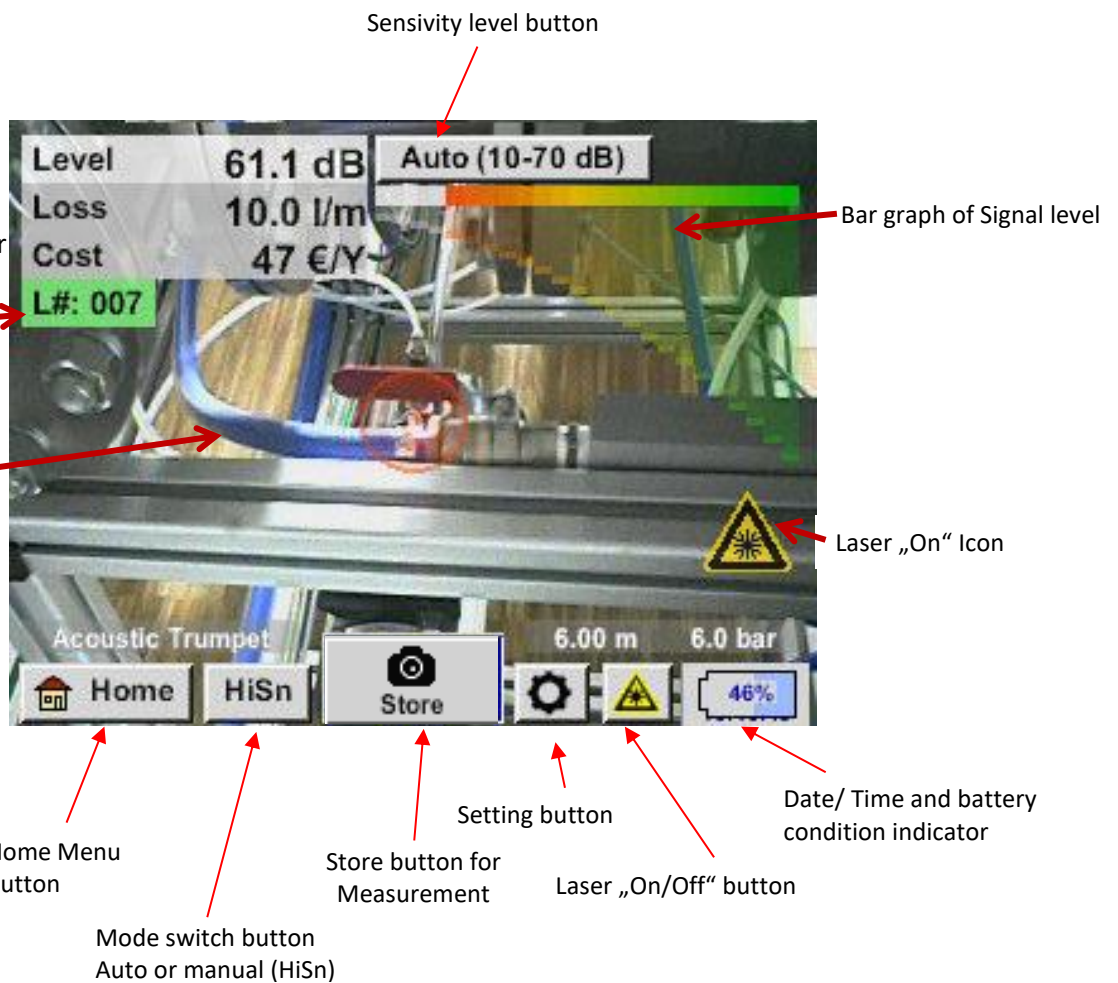

**Date / Time:**

01.02.2018  
14:02:24

**Battery condition indicator**

Battery condition:



Power supply connected and battery is charging:



### 11.3 Home menu LD 500

The operation is largely self-explanatory and menu-driven via the touch panel.

The selection of the respective menu items occur via short "tapping" with the finger or a soft round pen.

**Attention:** Please use no pens or other objects with sharp edges!  
The foil can be damaged!

Before the leakage search is started, the device must be configured. The user can access the menu by clicking the "Home" button. The following figure shows the Home "Menu".



With the button „**Home**“ you access the basic menu of the LD 500.

Return to measurement by pressing „**Leakage**“ –button.



### 11.3.1 Configuration of LD500

Home → Configuration

\*\*\* Configuration \*\*\*

|                            |               |    |
|----------------------------|---------------|----|
| National Standard          | <b>ISO</b>    | US |
| Cost / 1000 m <sup>3</sup> | 20.000        | €  |
| Operating hours/year       | 8760          |    |
| Parameter                  | Meas. Point   |    |
| Home                       | Default Value |    |

Cost

|                               |                             |
|-------------------------------|-----------------------------|
| Standard Mode                 | <b>Expert Mode</b>          |
| Electricity price / kWh       | 0.158 €                     |
| Specific power                | 0.120 kWh/m <sup>3</sup>    |
| <b>Electricity cost [70%]</b> | 19.000 €/1000m <sup>3</sup> |
| Total Cost[100%]              | 27.143 €/1000m <sup>3</sup> |
| OK                            |                             |



In the configuration settings the unit system can be selected, and the required parameters entered, this to calculate the leakage costs per year.

- Selection of ISO or US unit system
- Call up the text field "Costs/ 1000 m<sup>3</sup>" to define the costs. There are 2 variants to choose from:
  - **Standard:** Cost per 1000 volume units  
Enter cost and the currency  
Default value: 19 € / 1000 m<sup>3</sup> or 0.538€/1000cf
  - **Expert:** Here you can see in detail the electricity costs / kWh and define the specific power of the system. For the specific power 3 pre-defined asset values are created and a user defined input field for the individual input is made available.
- Enter working hours per year

## Home → Configuration → Parameter

Depending on the selected sensor type, there are up to 4 pre-defined pressure and distance values that can be selected directly as well as two fields (white) in which values for the pressure and the distance are freely selected.

For the **different sensor types** different **minimum and maximum distances** from the LD500 to the leakage are defined to calculate valid leakage loss and costs per year. These distances must be strictly adhered too.

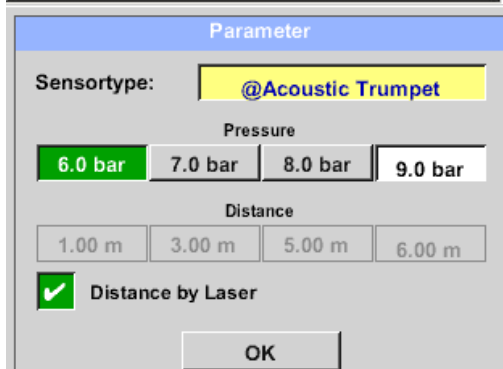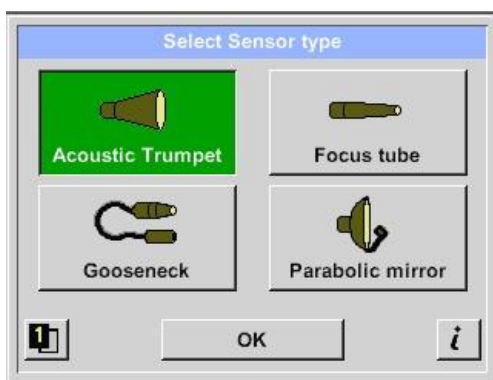

### → Sensor type

Selection of the sensor type according to the application and ambient conditions, see therefor chapter 9.

Select sensor type and confirm choice by pressing "OK"

### → Pressure (line pressure in bar)

The **pressure** can be set variably between 1 - 10 bar.

### → Distance (distance to leakage in m)

The min. or max. distance depends on the sensor type used.

When using the acoustic trumpet with laser distance measurement, the measured distance can be taken over directly, please activate "Distance by laser".

**Note:** For the use of the "Laser distance measurement", the laser must also be activated, see chapter 10.4. In case of a deactivated laser the icon "Laser?" flashes alternately yellow and red.



Home → Configuration → Meas.Point

The figure consists of three screenshots of the 'Meas.Point' configuration interface.

The top screenshot shows the 'Meas. Point' dialog box with the following fields:

- Company: CS Instruments
- Building: Halle 4
- Place: Maschine 1
- LeakTag: 1
- OK button

The middle screenshot shows a list of measuring points:

| Nr. | Company        |
|-----|----------------|
| 001 | CS Instruments |
| 002 | Gaffel         |
|     |                |
|     |                |
|     |                |

Buttons at the bottom: new, delete, OK.

The bottom screenshot shows the 'Company Name' input screen:

- Top bar: 14/32, CS Instruments, ←, Clr
- Keypad: 1-0, q-w-e-r-t-z-u-i-o-p, a-s-d-f-g-h-j-k-l-+, y-x-c-v-b-n-m-, ., -, @#\$, ABC, Abc
- Buttons: OK, Cancel

The measuring point is stored for each leakage in its journal data. These can be seen later in the leakage report in the software.

→ LeakTag: will be automatically increased by one after storing a measurement.

All information about the measuring point can be changed by selecting the corresponding text field or the stored measuring points can be loaded from the internal database.

Then a menu opens with the available / saved entries. When selecting a saved value, select it (highlighted in green) and then take over with „OK“.

If a new entry is necessary, the input menu opens after pressing the „new“ button.

Input is accepted via „OK“.

This procedure is analogous to enter the information for company, building and location.

Using the „delete“ button, individual entries can be deleted too.

### 11.3.1.1 Sensortype selection (Measuring tool)

In order to simplify the leak detection for the user, various tools for different measuring conditions have been developed .

The distances mentioned for quantifying the leakage always refer to the front of the respective tool.



#### 11.3.1.1.1 *Intelligentes Tool*

Ab FW 3.02 werden die angeschlossenen Mess-Tools automatisch erkannt. Voraussetzung ist das die Tools dies unterstützen.

Bei Verwendung älterer Sensortypen (Messtools), ohne Erkennung, muss beim Start das entsprechende Tool ausgewählt werden, siehe Kapitel 11.3.1.1.2 Auswahl Sensortyp manuell.

#### 11.3.1.1.2 *Sensortyp selection manual*

After starting the LD 500 with a tool without automatic detection, the corresponding sensor type must be selected and confirmed with "OK".

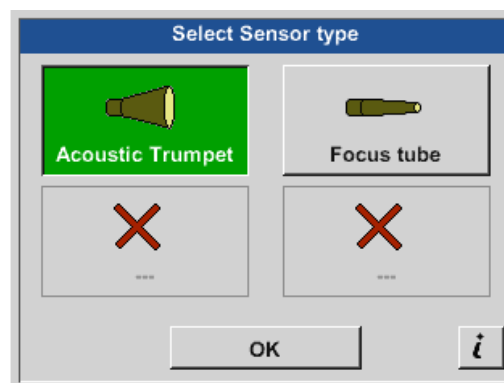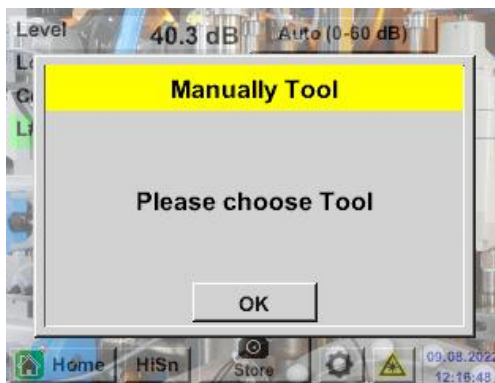


If the parabolic mirror / gooseneck has been ordered separately, the application data for the devices must be loaded into the LD500 first. Data is supplied via USB stick.

**Import:**

Home → Export/Import → Import new Tool → Parabolic Mirror / Gooseneck Serial Number

### 11.3.1.2 Storing of the measurement



To store the measurements please press either the button **„Store“** on the foil keypad, see chapter [Device components and controls](#) , or by button **„Store“**  in the display.

All data are stored on to the internal SD card.

The measurement data, the measurement point and the image of the measurement point are saved as a journal, which can be exported later and a report can be created with the CS Leak Reporter (order no.: 0554 0105).

After pressing one of the two **„Store“** keys, the corresponding information for the measuring point must be completed. The measuring point information of the last stored storage (company, building and location) is displayed, the numbering of the leaking tag is increased by 1.

e.g.:

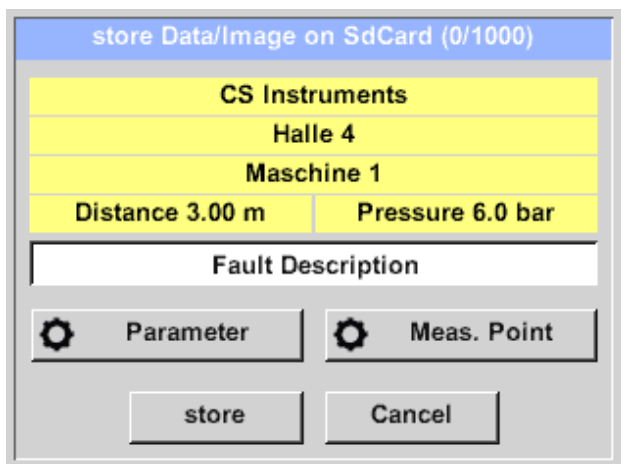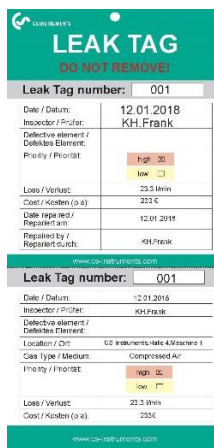If necessary, fill out the Leak Tag-form and attach it to the measuring location.

Please use correct Leak Tag-number.

### 11.3.1.3 Parameter / Meas. Point (Re-Check)

*Store → Parameter*

*Store → Meas. Point*

At this point, it is again possible to check and correct the parameters „Pressure" and „Distance" and the measuring point.

Changing the parameters gives new values for leakage and cost.

Execution of the corrections see description [chapter 9.3.1](#)

### 11.3.1.4 Fault description

Store → Textfield Fault Description

store Data/Image on SdCard (0/1000)

CS Instruments  
Halle 4  
Maschine 1  
Distance 3.00 m    Pressure 6.0 bar

Fault Description

Parameter    Meas. Point

store    Cancel

---

Fault Description

Leak.Element

Measures

Replacement

Repair    Status    under pressure

Comment

OK

---

1-5 (15)

| Nr. | Leak.Element       |
|-----|--------------------|
| 001 | Air tool           |
| 002 | Ball valve         |
| 003 | Fehlerbeschreibung |
| 004 | Filter unit        |
| 005 | Fitting            |

new    delete    Cancel    OK

In addition to the details of the measuring point with company, building and location, it is possible to enter a fault description

To do this, select the text field „**Fault description**“.

The following error descriptions are available, which significantly facilitate subsequent leakage elimination.

- Leakage element
- Measure
- Spare part
- Repair possible under pressure?
- Leakage repaired on site (status)

The entries are also stored in an internal database so that they can be used again and again.

Some suggestions are already saved on delivery.

See left, for example the selection for the field "Leak. Element".

### 11.3.1.5 Storing measurement data to internal SD-card

Store → store

Data & Picture will be stored.

Level 61.1 dB    Auto (10-70 dB)  
Loss 10.0 l/m  
Cost 47 €/Y  
L#: 007

CS Instruments  
Halle 4  
Maschine 1  
L#: 001  
Loss: < 1.1 l/m  
Cost: < 11 €/Y  
Distance: 1.00 m  
Pressure: 6.0 bar

are all values OK ?

Yes    No

Before final storage of the measurement on the internal SD card, a summary is created and the correctness is queried once more for safety.


Storage is done with the „**Yes**“ key.

The „**No**“ key returns to the previous menu.

### 11.3.2 Export/Import

With *Home* → *Export / Import*,

- Recorded "Leakage data" can be transferred to a USB stick
- System settings can be exported as well as imported
- Measuring points (company, building and location data) can be exported as well as imported.
- Non-activated optional measurement tools can be activated/loaded.

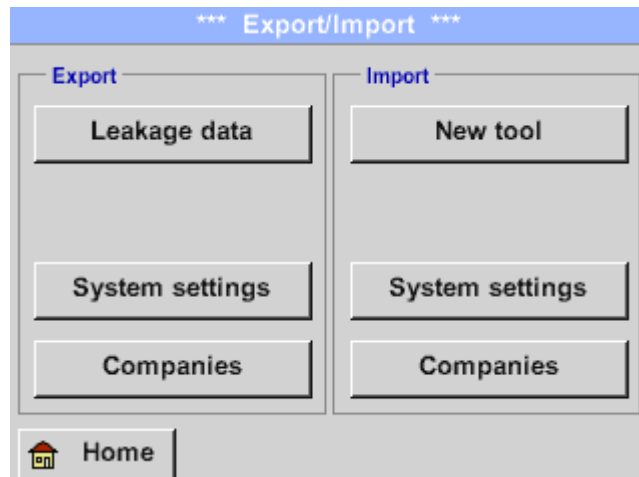

### 11.3.2.1 Export

#### 11.3.2.1.1 Export „Leakage Data“



Once all leakages have been documented, the next step is to export the data to a USB stick.

The user has the possibility to select one or more companies and to determine the start and end time of the leakage export.

Home → Export / Import → Export → Leakage Data

\*\*\* Export Leakage data \*\*\*

Company

start

end

Files to export: no Data

| Mo | Di | Mi | Do | Fr | Sa | So |
|----|----|----|----|----|----|----|
|    |    |    | 1  | 2  | 3  | 4  |
| 5  | 6  | 7  | 8  | 9  | 10 | 11 |
| 12 | 13 | 14 | 15 | 16 | 17 | 18 |
| 19 | 20 | 21 | 22 | 23 | 24 | 25 |
| 26 | 27 | 28 |    |    |    |    |
|    |    |    |    |    |    |    |

< 1 Februar 2018 >

select from day 01.02.2018

| Time  | Company      | Building | Measurement place |
|-------|--------------|----------|-------------------|
| 10:23 | CS Instru... | Halle 4  | Maschine 1        |
| 10:28 | CS Instru... | Halle 4  | Maschine 1        |
|       |              |          |                   |
|       |              |          |                   |
|       |              |          |                   |

The „**Change**“. button can be used to select one, several or all companies to be exported. Use „**Start**“ and „**End**“. to define the period for which stored measurement data are to be exported.

The selected date is always highlighted in green and the dates of the Sundays are, as in the calendar, red. Highlighted.


For days on which measurement data was recorded, the date numbers are visually exalted

If several measurements have been recorded on a date, they will appear after the date selection.

Now you can easily select the desired recording.

With „**OK**“. the start or end time is taken over.



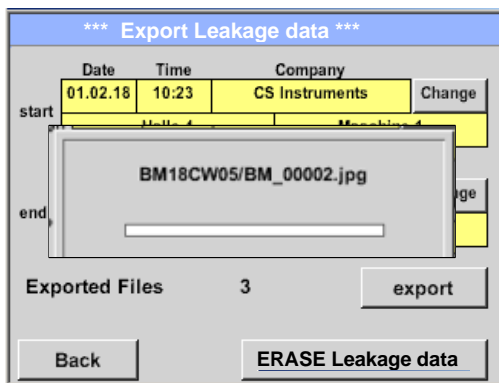

Press the „**Export**“- button to transfer the selected data to the USB stick  
In the example given, 3 measurements are exported.

With „**ERASE Leakage Data**“ the Journal Database is deleted.

For verification is still a security question.

With „**Back**“ you return to the main


### **Attention:**

When the function «**ERASE Leakage data**» is activated, **ALL** leakages in the memory are irretrievably deleted..

### 11.3.2.1.2 Export of System settings

This feature is especially relevant to the version LD 510, here for storing the external sensor settings as well as e.g. display option for charts, sensor value etc.

Home → Export / Import → Export → System settings

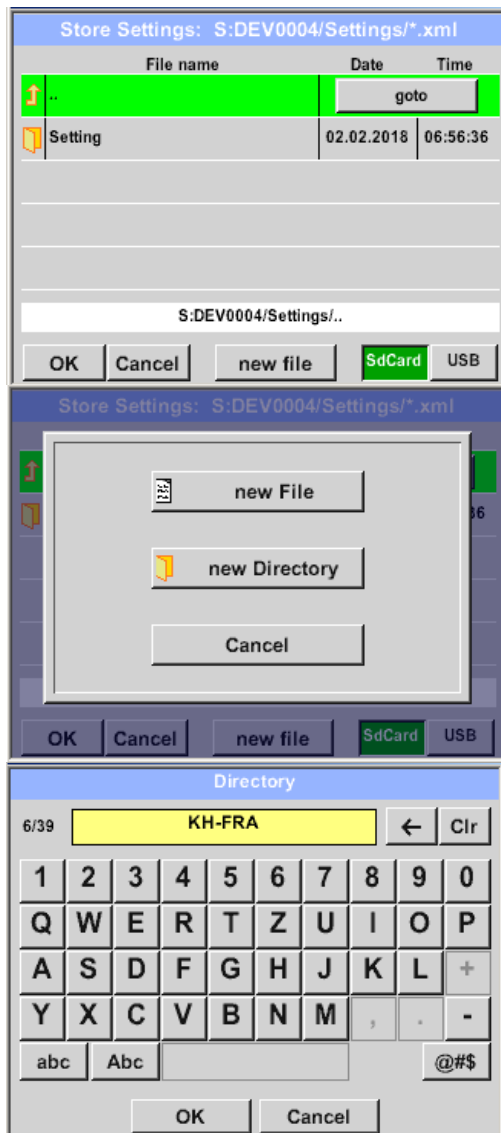

Here the definition of the storage location takes place

Selection for internal SD card with activation of key „**SdCard**“ or on USB stick with key „**USB**“.

The selection of the desired folder is made by selecting and activating with „**goto**“ button.

If a new directory is required, this is done by pressing „**new File**“, this can be created by selecting „**new Directory**“

Saving a system file with a new name takes place analogously, then the key „**new File**“ must be pressed




Entries are to be confirmed with „**OK**“.

With „**Cancel**“ you return to the previous menu.

### 11.3.2.2 Import

#### 11.3.2.2.1 Import of system settings

Home → Export / Import → Import → System settings

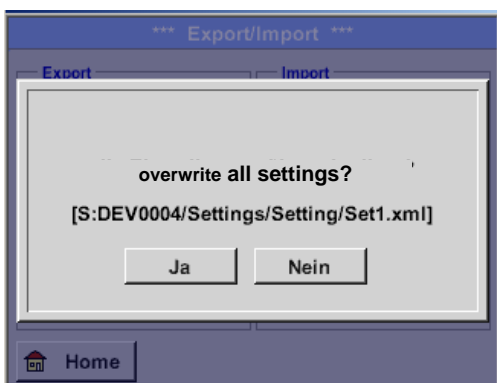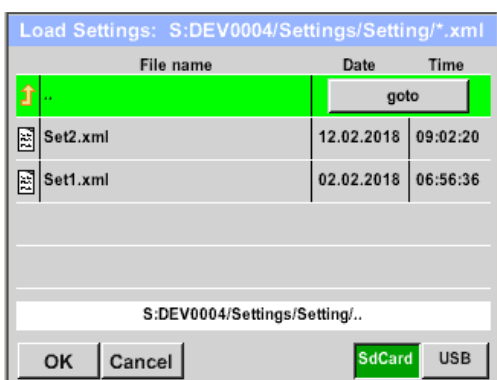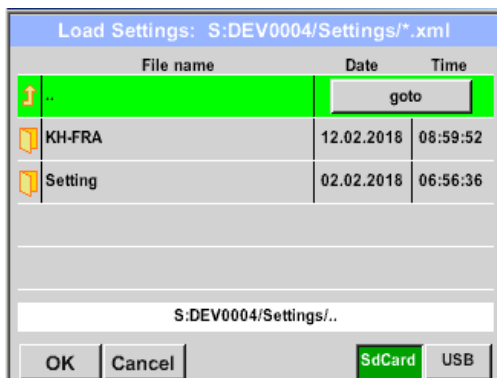

Sequence of directory and file selection is analogous to file export.  
Selection of internal SD card with activation of key „**SdCard**“ or on USB stick with key „**USB**“.


The selection of the desired folder is made by selecting and activating with the „**goto**“ button, then select corresponding system file.

Selection to be confirmed with „**OK**“.

Since system-relevant changes are made here, a confirmation prompt is issued, which must be confirmed with „**OK**“.

### 11.3.2.2.2 Import new measurement tool

Home → Export / Import → Import → Import new Tool

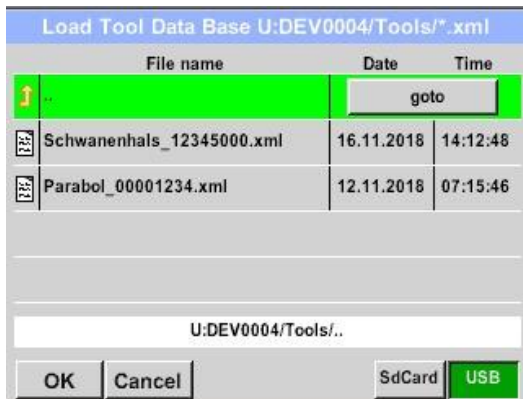

The directory and file selection process is the same as for export e.g. system settings. Selection of internal SD card with activation of button **"SdCard"** or of USB stick with button **"USB"**.

Select the desired folder by pressing the **"goto"** key and then the corresponding system file.

Confirm your entries with **"OK"**.


Since system relevant changes are made here, a security query is made which must be confirmed with **"Yes"**.

### 11.3.2.3 Export / Import Customer database

These functions allow the stored measuring point descriptions (companies, buildings and location) to be exported as an XML file or to be imported from another LD 500 exported database.

That means it is also possible to create and import the database externally, but the prerequisite is the correct format of the XML file.

*Home → Export / Import → Export → Customers    Export / Import → Import → Customers*

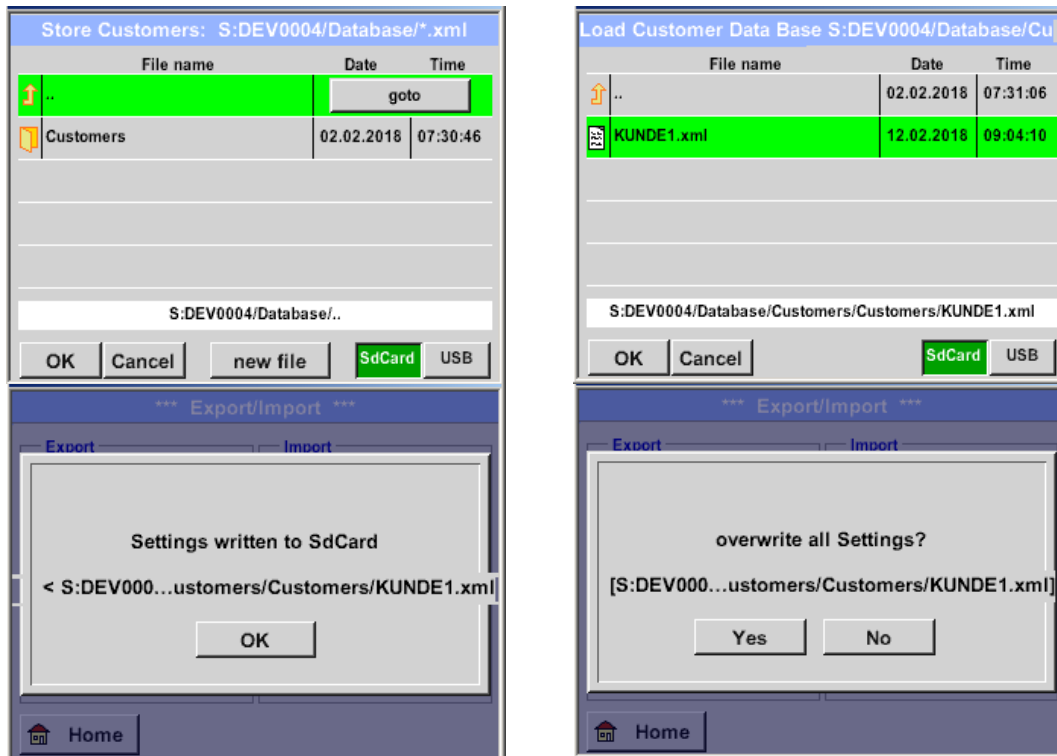


As data changes are made during importing, a confirmation question needs to be confirmed with „**Yes**“.

**Remark:** Customer data will be exported to folder \\DEV0004/Database .  
Data to be imported (XML files) must be stored in the directory \\DEV0004/Database as well.

### 11.3.3 View bitmaps

Home → View Bitmaps → Select Screenshot

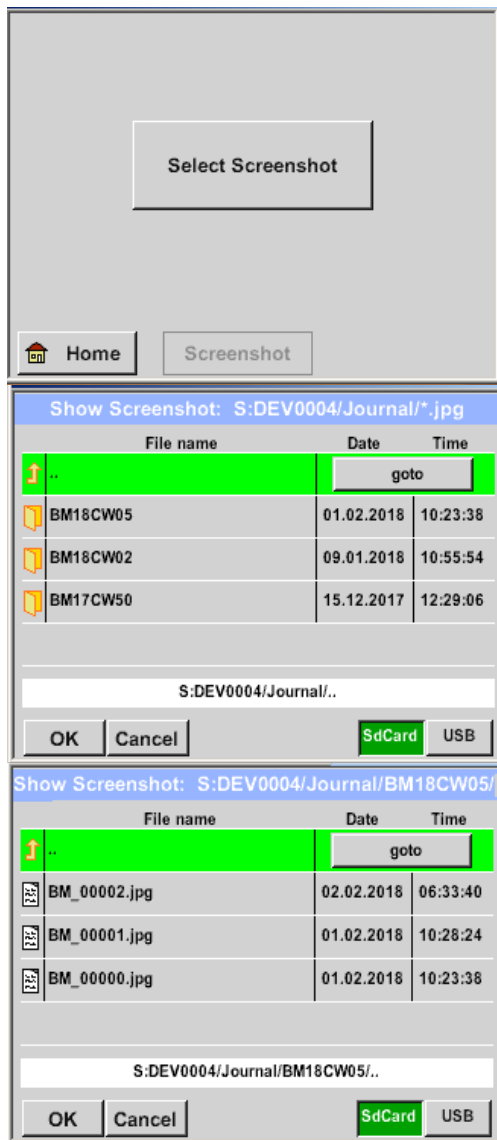

This allows the stored pictures (measurement pictures) on the SD-Card or USB Stick to load and shown in the display again.

Please press button „Select Screenshot“ and select the required picture (bitmap).

The pictures are stored and organized in different directories

The directory structure is year / calendar week

Designation: BMyycWxx  
yy = Year xx = calendar week

The selection of the desired folder is made by selecting and activating with the „**goto**“ button.

Select the desired image and then display with „**OK**“.

### 11.3.4 Device Settings

The settings are all protected by a password!

Settings or changes are generally confirmed with **OK**!

**Remark:**

If you go back to main menu and then again one of the setting menus is called, you must enter the password again.


Home → Settings



Overview of the *Settings*

#### 11.3.4.1 Passwort-Einstellung


Home → Settings → Passwort Settings

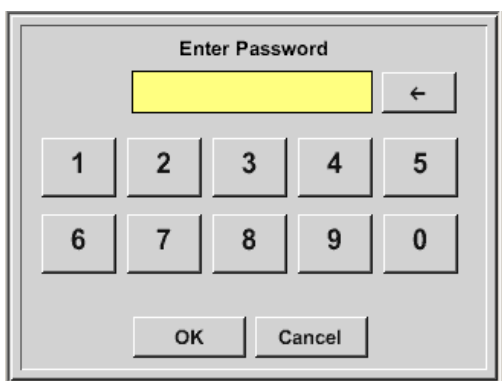

Factory settings for password at the time of delivery: 0000 (4 times zero).

If required, the password can be changed in the *Password settings*.

The new password must be entered two times in a row and in each case confirmed with **OK**

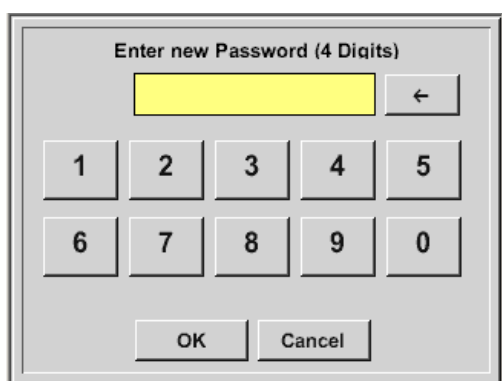

If an incorrect password is entered there appears *Enter password* or *New password repeat* in red font.


If you can't remember the password, please use Master password in order to enter a new password.

**Remark:**

The master password is supplied together with the instrument's documentation.

11.3.4.2      **Device Settings**

Home ➔ Settings ➔ Device settings

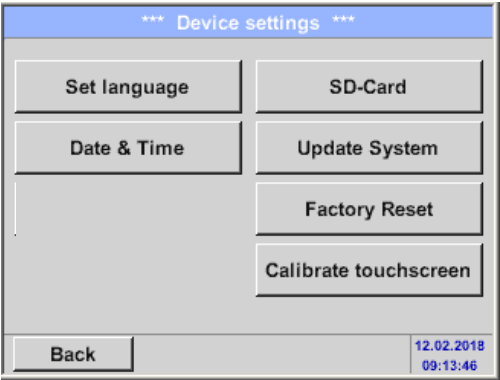

Overview of *Device settings*

11.3.4.2.1    **Language**

Home ➔ Settings ➔ Device settings ➔ Set language



Here you can select one of 11 languages for the LD 500.



### 11.3.4.2.2 Date & Time

Home → Settings → Device settings → Date & Time

By pushing the *Time Zone* description field and enter the correct *UTC*, you can set the correct time all over the world.

The summer and wintertime switchover is realized by pushing the *Daylight Saving* button.

### 11.3.4.2.3 SD-Card

Home → Settings → Device settings → SD-Card → Reset Logger Database

Home → Settings → Device settings → SD-Card → Erase SdCard

By pressing *Reset Logger Database* all actual stored data on SD-Card will be blocked for use in LD500 / LD510. Nevertheless all data are still stored and available for external use only.

By pressing *Erase SdCard* all Data on the SD-Card will be deleted.

Home → Settings → Device settings → SD-Card → Test SdCard

With activation of *Test SdCard* data are written and read to and from the SD-card.

The number of test cycles, as well as possible errors and error codes are display in the status line.


Press the *Back* button to returns to the device settings menu.

#### 11.3.4.2.4 System update

If required, there is the possibility for the LD 500 to download a firmware update to the device via the USB stick. The latest software is available on the CS INSTRUMENTS GmbH homepage

The received file must then be stored on the USB stick and transferred to your device as described below.


Home → Settings → Device settings → System-Update

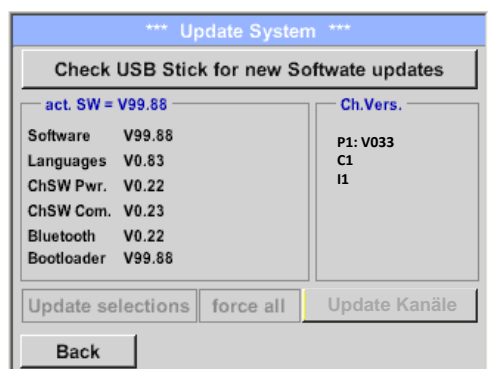


Overview of *System-Update*-Functions.

#### 11.3.4.2.5 Check for Updates

Home → Settings → Device settings → System-Update → check USB-Stick for new Updates

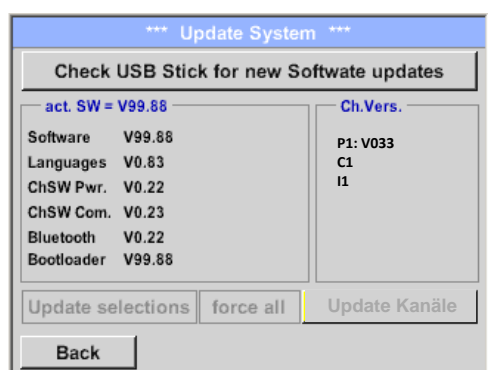

If after pressing the button “*Check USB Stick for new Software updates*” the following messages appear in the window, the LD 500 is not properly connected to the USB flash drive or there are no files available.

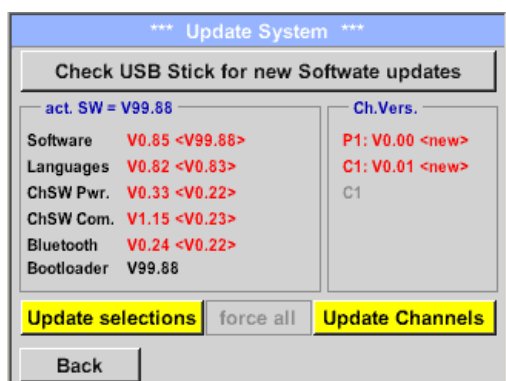

If the LD 500 is correctly connected to the USB stick and there are new versions of the individual SW Parts, the new versions are marked in red.


The update is started by pressing the “*Update selections*” button.

If it is required to install an older software version, you have press the button “*Force all*”

#### 11.3.4.2.6 Update Channels

Home → Settings → Device settings → System-Update → Update-Channels

If there is an update either for the internal and external channel (LD 510 only), it must be started separately

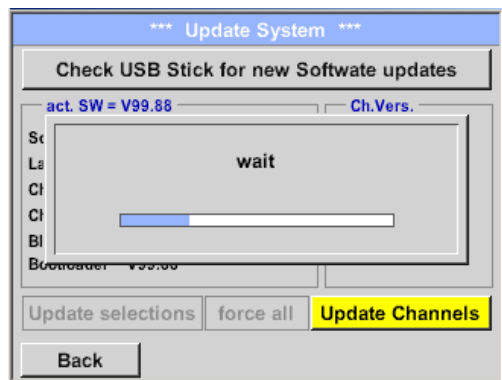

*Update* of the Channels LD 500/ 510.


#### **Important:**

If the *Reboot system* button appears after the update, it must be pushed to restart the LD 500!


#### 11.3.4.2.7 Factory Reset

##### 11.3.4.2.7.1 Reset to default settings

Home → Settings → Device settings → System → Reset to Defaults

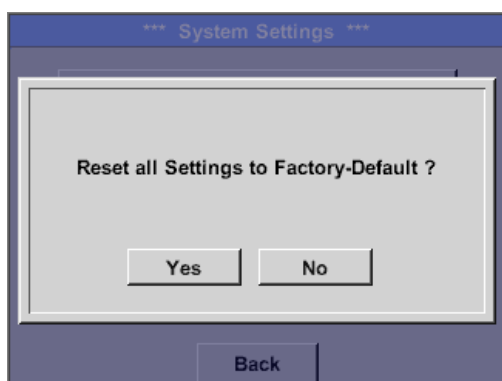

Bevor the settings are changed to the production default settings a safety prompt is displayed and must be confirmed by pressing the button „Yes“.

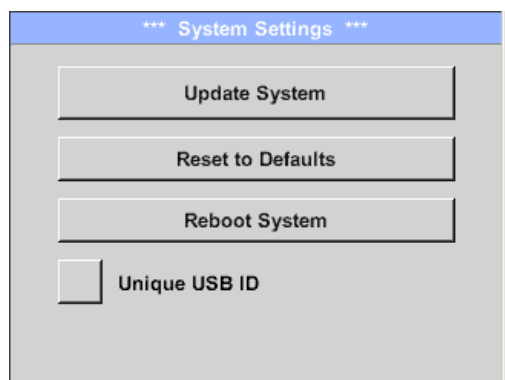



If needed with „**Reboot System**“ the LD 500 could be started(reboot) here.

#### 11.3.4.2.8 Unique USB ID

For connections with the PC, a status and therefore a unique USB ID can be defined here. Relevant for simultaneous connection of several USB devices to the PC.

### 11.3.4.2.9 Calibration of touchpanel

Home → Settings → Device settings → calibrate touchscreen

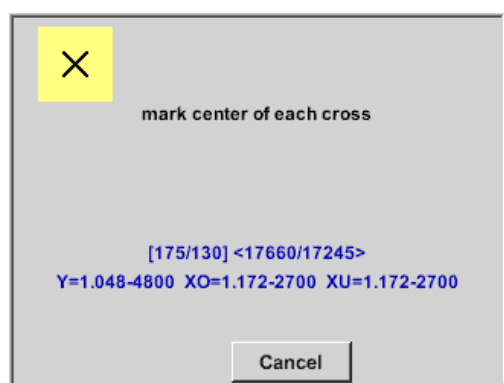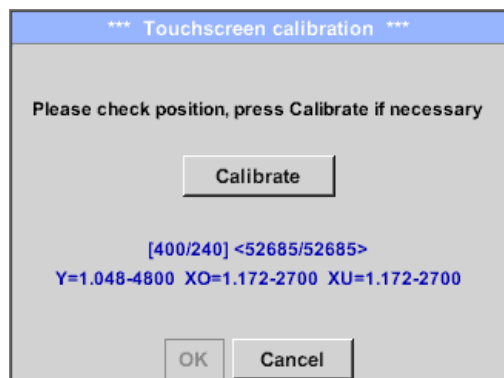

If necessary, the touch-screen calibration can be changed here.


Push *Calibrate* and it appears, 1. left above, 2. bottom right, 3. bottom left, 4. right above and 5. in the middle, a calibration cross that must be pushed consecutively.

If the calibration finished positive a message "*Calibration successful*" appears and have to be confirmed with *OK*.

Is this not the case, so you can repeat the calibration with the help of the *Cancel* and *Calibrate* button.


### 11.3.4.2.10 Set backlight brightness

Home → Settings → Set backlight

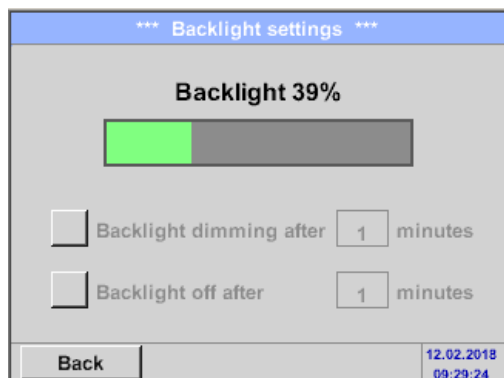


Here you adjust the desired *Backlight* (15-100%) of the display directly.

E.g. *Backlight* to 39 %

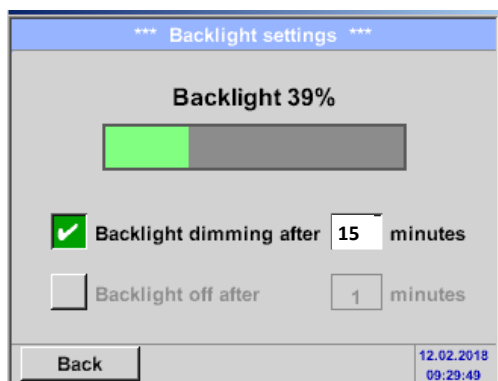

With the help of the *Backlight dimming after* button, after a definable time interval (here after 15 minutes), the *Backlight* can be reduced to the minimum.

As soon as the dimmed screen is operated again, the *Backlight* is committed automatically on the last set value before dimming.

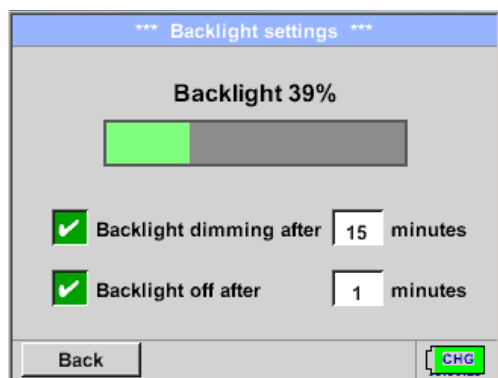

To reduce the energy consumption (device runtime), you can switch off the display backlight by setting "***Backlight off after***".

#### Remark:

At the first touch, the *Backlight* in our example is reset to 39%, after that a "normal" function operation is possible.

#### Important:

If the *Backlight dimming after* button is not activated, then the *Backlight* stays permanently on, in the currently set brightness.

### 11.3.4.2.11 Cleaning

Home → Settings → Cleaning




This function can be used for cleaning the touch panel during running measurements.

If one minute is not enough time to clean, the process can be repeated at any time.

If the cleaning faster finished, then you can push the *to abort press long* button (for one or two seconds) to cancel.

### 11.3.4.2.12 System-Status


Home → Settings → System-Status

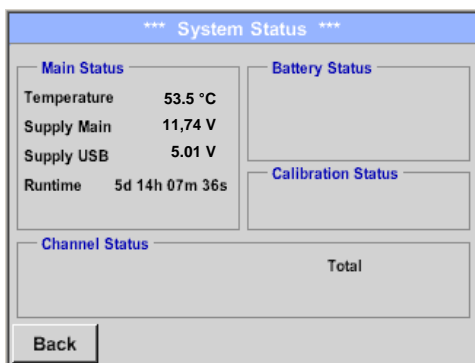

The menu item **“System status”** provides information about the power supply voltages and an operating hour counter.

### 11.3.4.2.13 About LD 500

Home → Settings → about LD 500

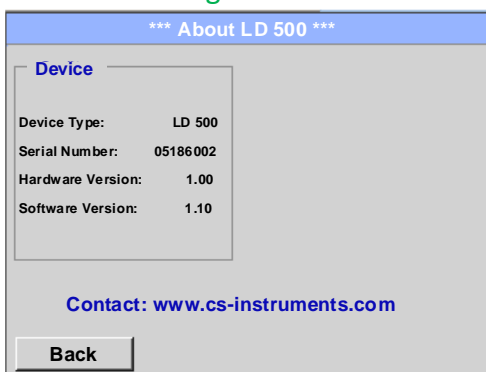

Brief description of the **Hardware** and **Software Version**, as well as the **Serial Number** of the LD 500.

Under options, you can buy four additional, different functions, if you have not done this by ordering.

## 12 Access to local web server via WLAN

The web server of the device uses IP addresses from the private address range Internet Protocol version 4 (IPv4) (192.168.x.x, according to RFC 1918). The use of a private address range makes unauthorised access from the internet more difficult, as direct addressing is not possible.

The device supports the activation of HyperText Transfer Protocol Secure (HTTPS) for encrypted communication in the local network.

### 12.1 Establishing a connection

The device can be accessed via WLAN for status queries and data transfer.

- Select the command "Home --> WLAN".

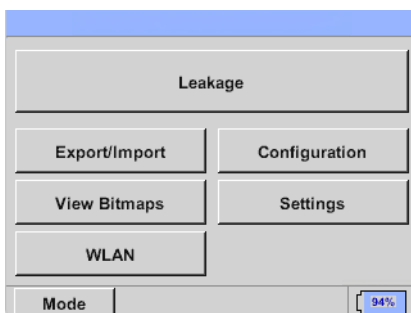


Figure 1: "Leakage" menu (example)

#### Activate unencrypted connection (optional)

By default, data is transmitted via an encrypted connection (HTTPS). Encrypted communication may reduce the transmission speed in local networks. If required, the default setting can be deactivated and the data can be transferred via an unencrypted connection.

- Deactivate the "HTTPS" setting.



Figure 2: Activate unencrypted transmission (example)

### Activate WLAN

- Activate the "WLAN enable" setting.  
The WLAN is activated.

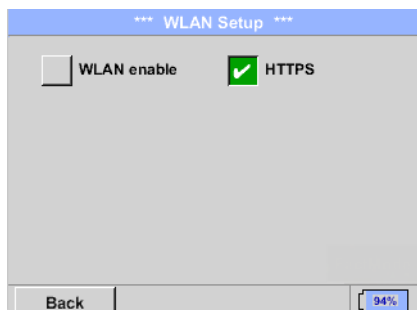


Figure 3: Activate WLAN (example)

You can use the "Connect to WLAN" command to dial into an existing WLAN network. Alternatively, a Wi-Fi hotspot can be provided via the device.

- Select the desired access type.

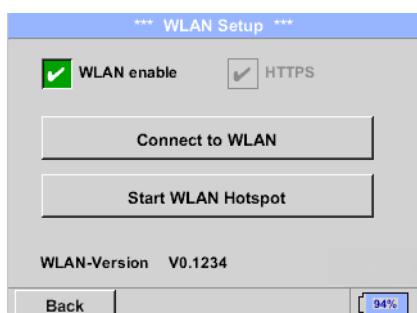


Figure 4: Select access type (example)

## 12.1.1 Connection via WLAN

### Select network

- Tap the "Connect to WLAN" button to dial into an existing WLAN network.
- Tap the "Select network" button.  
The device searches for all available networks.




Figure 5: Select network (example)



- Select the desired network.

The "Scan" button can be used to search for all existing networks again in the event of an error (e.g. WLAN router switched off).

- Tap the "OK" button.

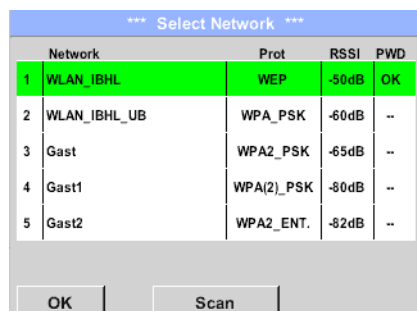

|   | Network      | Prot       | RSSI  | PWD |
|---|--------------|------------|-------|-----|
| 1 | WLAN_IBHL    | WEP        | -50dB | OK  |
| 2 | WLAN_IBHL_UB | WPA_PSK    | -60dB | --  |
| 3 | Gast         | WPA2_PSK   | -65dB | --  |
| 4 | Gast1        | WPA(2)_PSK | -80dB | --  |
| 5 | Gast2        | WPA2_ENT.  | -82dB | --  |

At the bottom of the dialog are two buttons: "OK" and "Scan".

Figure 6: Available networks (example)

### Establish connection

When a connection to the selected network is established for the first time, the password for the network must be entered. The password is saved on the device and does not need to be entered again the next time a connection is established.

- Tap the "Connect" button.
- Enter the password.
- Tap the "OK" button.

Once the password has been successfully entered, the connection to the network is established.

In the overview of available networks in the "PWD" column, it is noted that a password is available for the network.

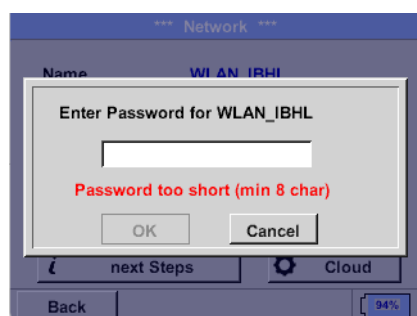


Figure 7: Enter password (example)

**NOTE****Password with special characters**

Some special characters are not displayed on the system keyboard due to the system.

- Establish the connection via a WLAN hotspot.

**or**

- Change the password for the network.



Figure 8: Connection successfully established (example)

If the password for the network is changed, an error message appears the next time you log in.

- Confirm the error message.
- Enter the new password.

For further information on accessing the web server, see chapter "12.2 Accessing the local web server".

#### Disconnect connection

- To disconnect the connection, tap the "Disconnect" button.

### 12.1.2 Connection via WLAN hotspot

If the transmission in the network is slow or the signal strength of the WLAN router is low, a WLAN hotspot can be provided via the device.

- Tap the "Start WLAN Hotspot" button to make a WLAN hotspot available.

#### Use pre-configuration

A pre-configuration is stored on the device for easy setup of a WLAN hotspot.

- Tap the "Activate" button.  
The WLAN hotspot is activated.



Figure 9: Activate WLAN hotspot (example)


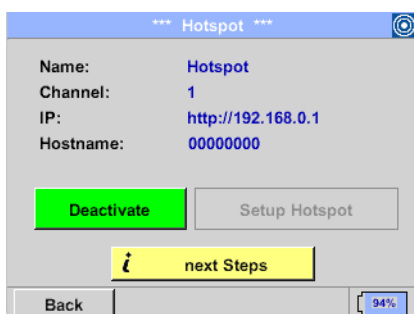


Figure 10: WLAN hotspot active (example)

Use own configuration (optional)

If required, a customised configuration can be stored.

- Tap on the "Setup Hotspot" button.
- Fill in the form fields.
- Tap the "OK" button.

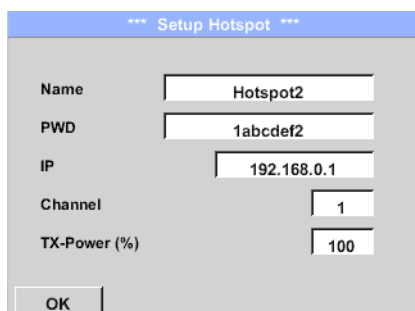

| *** Setup Hotspot *** |             |
|-----------------------|-------------|
| Name                  | Hotspot2    |
| PWD                   | 1abcdef2    |
| IP                    | 192.168.0.1 |
| Channel               | 1           |
| TX-Power (%)          | 100         |
| OK                    |             |

**Figure 11: Setting up a WLAN hotspot (example)**

Connect Windows PC to WLAN network

- Connect the Windows PC to the WLAN hotspot network.

For further information on accessing the web server, see chapter "12.2 Accessing the local web server".

Disconnect connection

- To disconnect the connection, tap the "Deactivate" button.

## 12.2 Accessing the local web server

Once the connection between the device and Windows PC has been successfully established, the device's web server can be accessed via an Internet browser.

- Start your internet browser.
- Preferably use Mozilla Firefox for this.

### NOTE



#### Connection problems

Some internet browsers automatically add "https://" to the address line when the URL is entered manually. If the "HTTPS" function is not activated, this can lead to connection problems.

- Enter the corresponding URL (encryption type and IP address) in the address bar of your internet browser.

Example: `https:\\192.168.0.1` (encrypted connection)

`http:\\192.168.0.1` (unencrypted connection)

A self-signed certificate is stored in the device, which cannot be permanently updated for technical reasons. This may result in a security warning in some Internet browsers.

- Accept the certificate manually.
- If the internet browser displays a warning about an insecure certificate, check whether an exception rule needs to be set for the device or whether a separate SSL certificate can be stored.

If the connection setup fails, this can have various causes (incorrect network settings, restrictions due to firewalls, incorrect IP address or missing authorisations).

- Contact your IT department or your network administrator if you have problems establishing a connection.

### 12.2.1 User interface web server

Once the connection has been successfully established, the main menu of the web server is displayed.

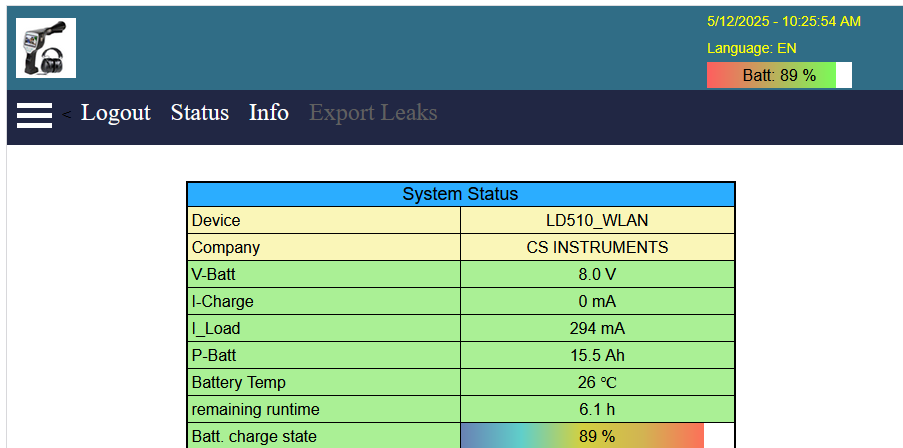


Figure 12: Main menu (example)

The language of the web server corresponds to the language configuration of the device and must be selected via the device.

- Select the desired language on the device.
- Restart the web server.

You can find more general information about the device under the "Info" menu item.

- Select the "Info" menu item.

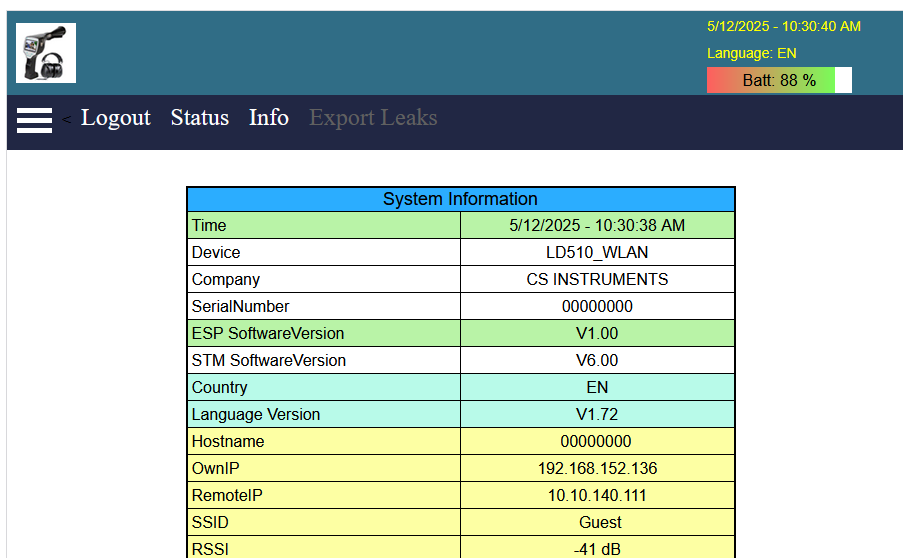


Figure 13: "Info" overview (example)

## 12.2.2 Exporting leakage data

### Log in

To export leakage files, you must log in to the device.

- Select the "Login" menu item.  
A security code is displayed on the device.
- Enter this security code in the form field.

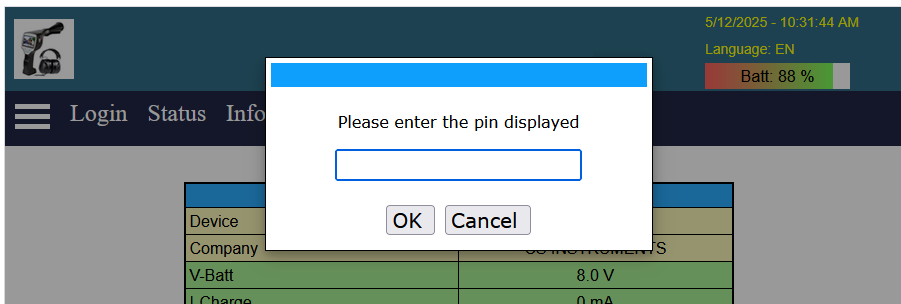


Figure 14: Enter security code (example)

### Export data

- Select the "Export leaks" menu item.
- Select the desired company or companies.
- Select the "Update" command to update the number of companies and the number of leakage files to be exported.
- Select the desired time period.
- Select the "Download Data" command.
- Select the desired target directory.
- Select the "Save" command.  
The data is exported as a \*.zip file.
- Unzip the \*.zip file.

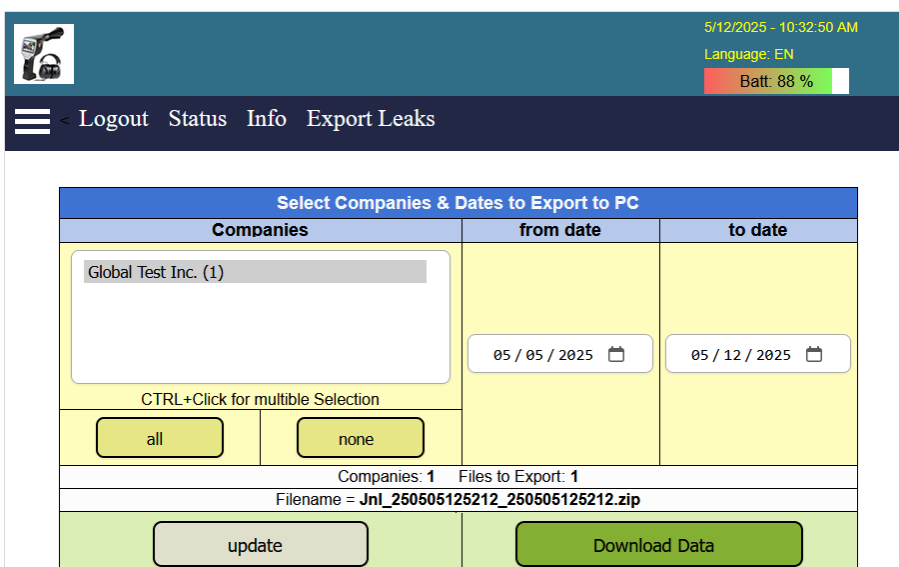


Figure 15: Export data (example)

### 13 Charging the batteries

The battery is charged within the device. For this, the supplied plug-in power supply is connected to the built-in charging socket of the LD 500 and the 230V socket.



The LD 500 checks the charging status of the battery and starts the charging process automatically if necessary.

To protect the Li-ION accumulator of exhaustive discharge the device is switching off automatically if a cell voltage of 6,4V will be reached.




## 14 Updating the device software

If required, a software update can be carried out via the device's local web server.

### Adjust network settings

For security reasons, a software update can only be carried out if the device and the Windows PC are connected to the same network.

- Connect the Windows PC and the device to the same network.  
Depending on the network environment in which the Windows PC is operated, the network settings (IP address) must be adjusted.
- Select the "Info" menu item to display the IP address of the device.
  - IP address device: „OwnIP“
  - IP address Windows PC: „RemotelP“
- If necessary, adjust the network settings.

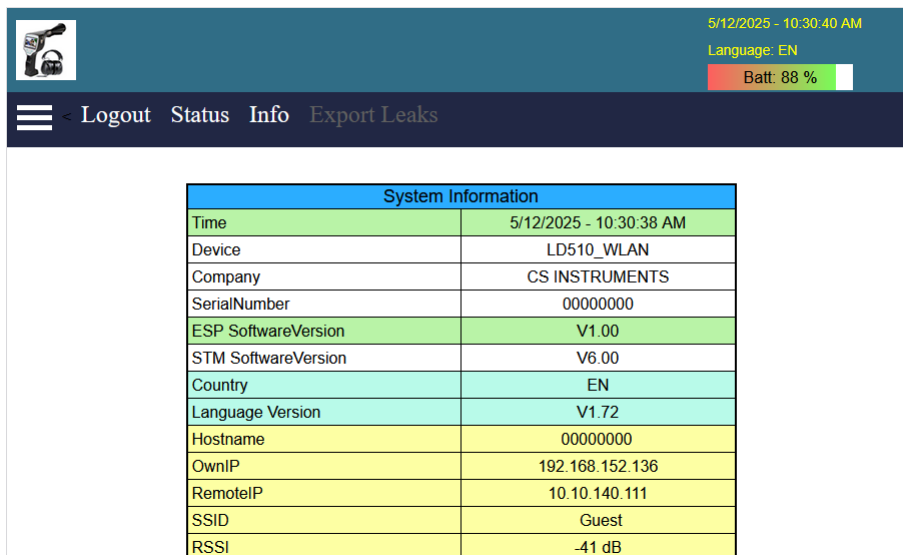

The screenshot shows the device's web interface. At the top, there is a status bar with a device icon, the date and time '5/12/2025 - 10:30:40 AM', the language 'Language: EN', and a battery level indicator 'Batt. 88 %'. Below this is a navigation bar with a hamburger menu icon and the following links: '< Logout', 'Status', 'Info', and 'Export Leaks'. The main content area displays a table titled 'System Information' with the following data:

| System Information  |                         |
|---------------------|-------------------------|
| Time                | 5/12/2025 - 10:30:38 AM |
| Device              | LD510_WLAN              |
| Company             | CS INSTRUMENTS          |
| SerialNumber        | 00000000                |
| ESP SoftwareVersion | V1.00                   |
| STM SoftwareVersion | V6.00                   |
| Country             | EN                      |
| Language Version    | V1.72                   |
| Hostname            | 00000000                |
| OwnIP               | 192.168.152.136         |
| RemotelP            | 10.10.140.111           |
| SSID                | Guest                   |
| RSSI                | -41 dB                  |

Figure 16: System information (example)

### Install software update

- Select the command "Main menu --> SW-Upload --> Browse...".
- Select the desired update file (\*.bin).
- Select the command "SUBMIT to ESP32 location".  
A security code is displayed on the device.
- Enter this security code in the form field.  
After entering the security code, the software update is installed.

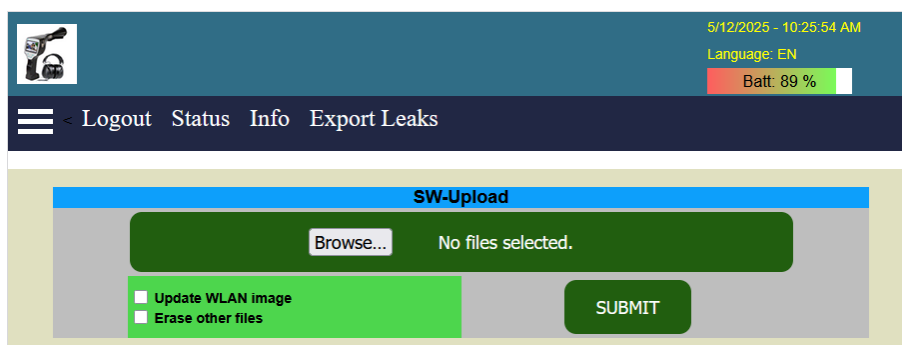


Figure 17: Install software update (example)

## 15 LD 510

### 15.1 Selection External sensor

The use of an „**external Sensor**“ requires to switch to its mode.

Home → Mode → Externer Sensor



Home menu for external sensor connection



### 15.2 Input signals of ext. sensor LD510

|   |                  |   |
|---|------------------|---|
| Input signals   |                  |   |
| Current signal<br>(0 – 20 mA / 4 – 20 mA)<br>internal or external<br>power supply | Measuring range  | 0 – 20 mA / 4 – 20 mA   |
|   | Resolution       | 0,0001 mA   |
|   | Accuracy         | $\pm 0,03 \text{ mA} \pm 0,05 \%$   |
|   | Input resistance | 50 $\Omega$   |
| Voltage signal<br>(0 - 1V)  | Measuring range  | 0 - 1 V   |
|   | Resolution       | 0,05 mV   |
|   | Accuracy         | $\pm 0,2 \text{ mV} \pm 0,05 \%$  |
|   | Input resistance | 100 k $\Omega$  |
| Voltage signal<br>(0 - 10 V / 30 V)   | Measuring range  | 0 - 10 V/30 V   |
|   | Resolution       | 0,5 mV  |
|   | Accuracy         | $\pm 2 \text{ mV} \pm 0,05 \%$  |
|   | Input resistance | 1 M $\Omega$  |
| RTD<br>Pt100  | Measuring range  | -200 - 850 °C   |
|   | Resolution       | 0,1 °C  |
|   | Accuracy         | $\pm 0,2 \text{ °C}$ at -100 - 400 °C<br>$\pm 0,3 \text{ °C}$ (further range)   |
| RTD<br>Pt1000   | Measuring range  | -200 - 850 °C   |
|   | Resolution       | 0,1 °C  |
|   | Accuracy         | $\pm 0,2 \text{ °C}$ at -100 - 400 °C<br>$\pm 0,3 \text{ °C}$ ( further range ) |
| Pulse   | Measuring range  | minimal pulse length 100 $\mu\text{s}$<br>frequency 0 - 1 kHz<br>max. 30 VDC    |

### 15.3 Cable cross section

#### 15.3.1 Sensor circuit points/Output signal:

AWG26, cable cross-sections: 0.14 mm<sup>2</sup>

## 15.4 Connection diagrams for different sensor types

### 15.4.1 Connector pin assignment for all sensors at the LD510

The interface connector to be used is a ODU Medi Snap 8 pin – Reference: K11M07-P08LFD0-6550


Available connection cables at CS INSTRUMENTS are:

ODU with Open ends: Order no 0553 0501, cable length: 5 m.  
Order no 0553 0502, cable length: 10 m.

ODU with M12 Connector: Order no 0553 0503, cable length: 5 m.

Extension cable (ODU/ODU): Order no 0553 0504, cable length: 10 m.

Connection scheme:

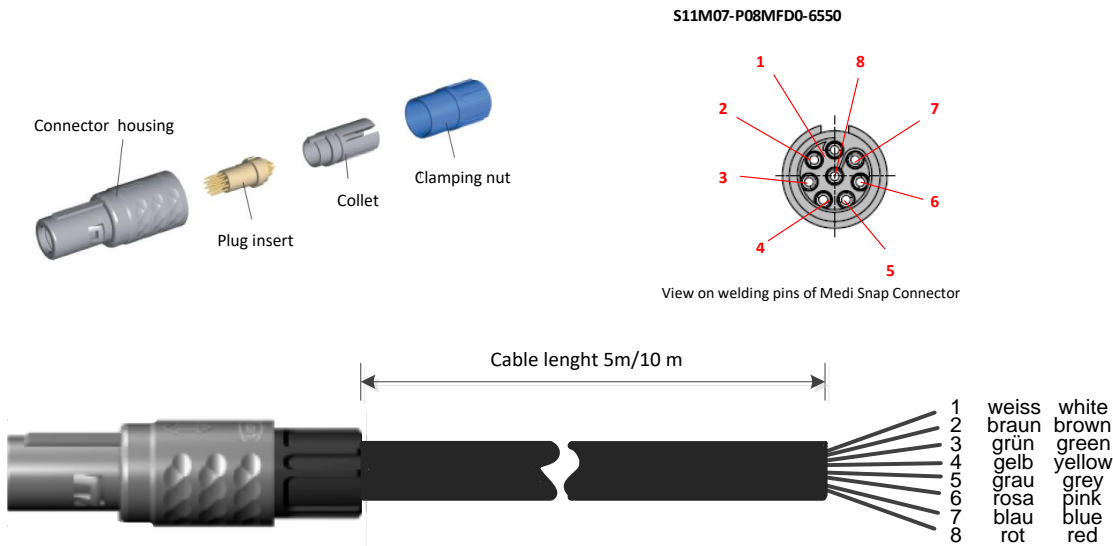

|             |   |   |        |
|-------------|---|---|--------|
| + RS485     | ● | 1 | White  |
| - RS485     | ● | 2 | Brown  |
| SDI         | ● | 3 | Green  |
| Analog IN + | ● | 4 | Yellow |
| Analog IN - | ● | 5 | Grey   |
| I (500µA)   | ● | 6 | Pink   |
| +VB 24Vdc   | ● | 7 | Blue   |
| -VB GND     | ● | 8 |        |

+ RS485

- RS485

SDI (CS-internal data transmission for all Dew point and Flow sensor FA/ VA 400)

ANALOG IN +


ANALOG IN -)

STROMQUELLE 500 µA


+VB, 24V DC Power supply for sensor

-VB, GND Sensor


### 15.4.2 Connection for CS dew point- and consumption sensors, series FA/VA 5xx

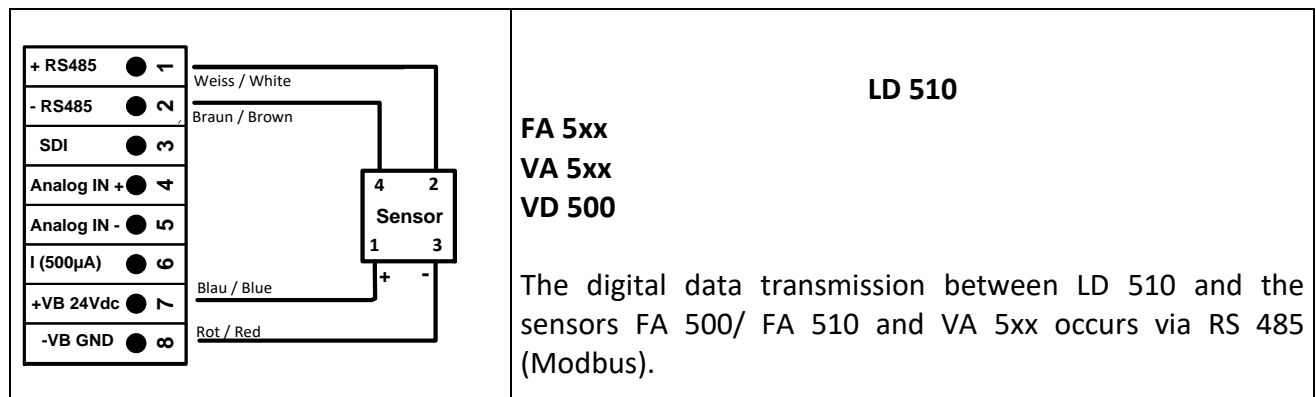




### 15.4.3 Connection with RS485

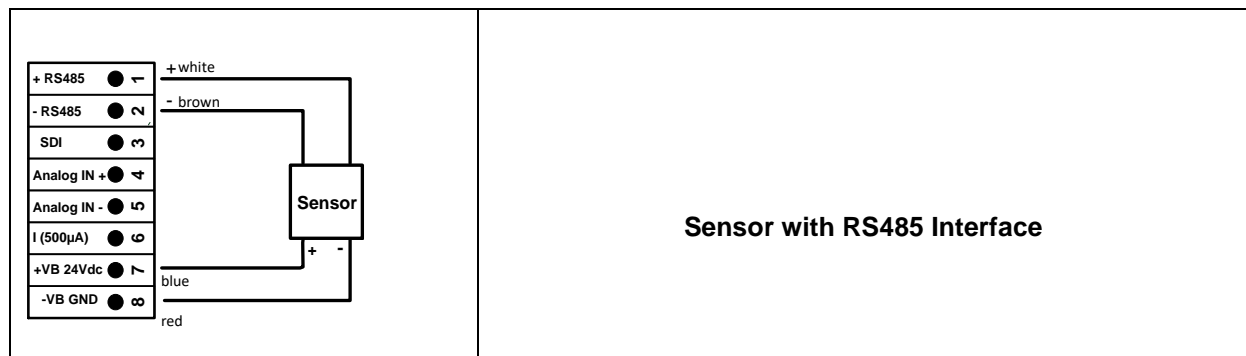

### 15.4.4 Three- and four-wire power supply 0 - 1/10/30 VDC

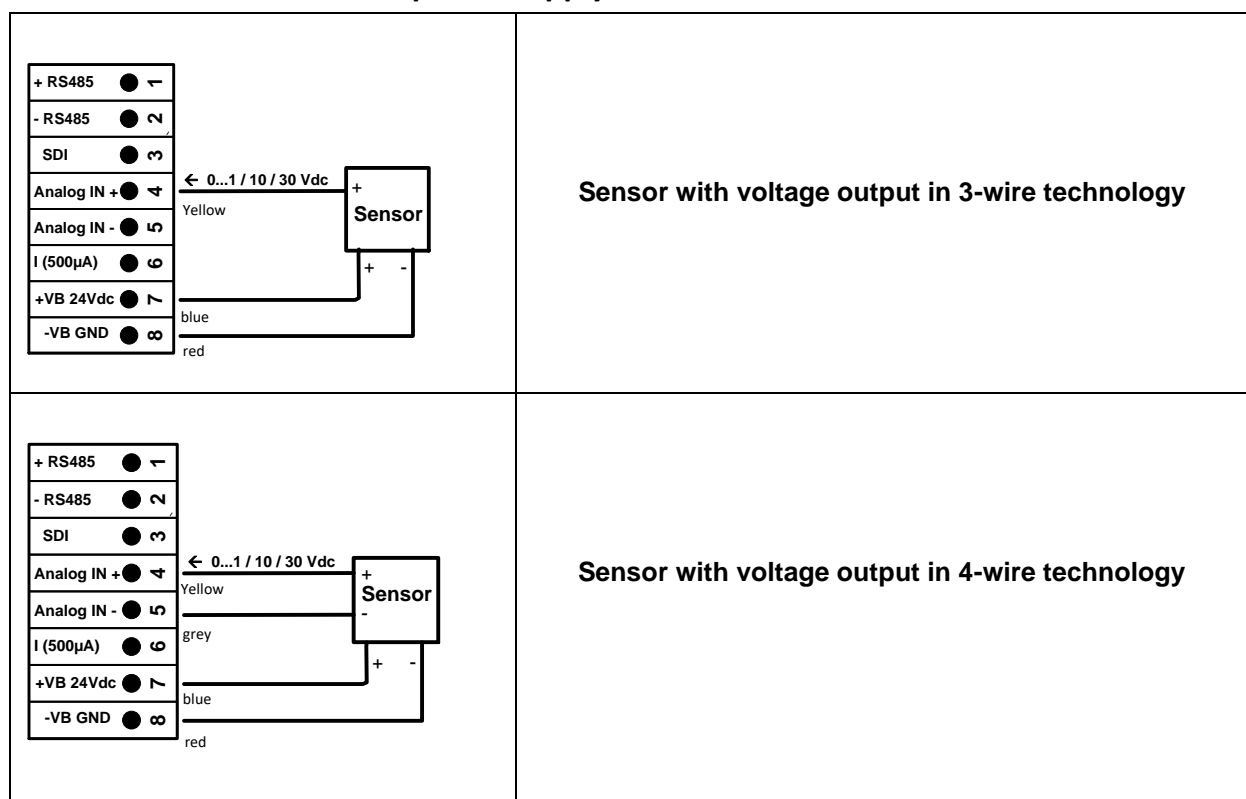

15.4.5 Analogue two-, three-, and four-wire current signal
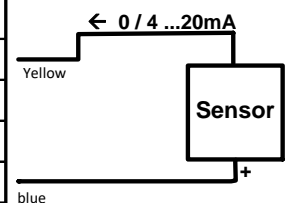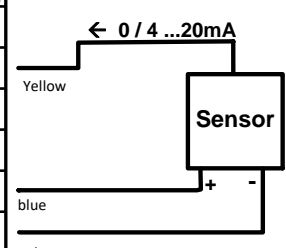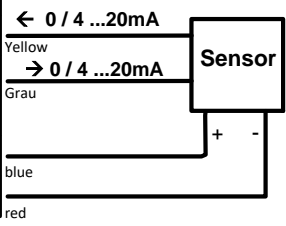
| Sensors with 4 - 20 mA-output in 2-wire technology  |         |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
|---|---------|---|---------|---|-----|---|-------------|---|-------------|---|-----------|---|-----------|---|---------|---|--------|
| <table><tr><td>+ RS485</td><td>1</td></tr><tr><td>- RS485</td><td>2</td></tr><tr><td>SDI</td><td>3</td></tr><tr><td>Analog IN +</td><td>4</td></tr><tr><td>Analog IN -</td><td>5</td></tr><tr><td>I (500µA)</td><td>6</td></tr><tr><td>+VB 24Vdc</td><td>7</td></tr><tr><td>-VB GND</td><td>8</td></tr></table>    | + RS485 | 1 | - RS485 | 2 | SDI | 3 | Analog IN + | 4 | Analog IN - | 5 | I (500µA) | 6 | +VB 24Vdc | 7 | -VB GND | 8 | LD 510 |
| + RS485   | 1       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| - RS485   | 2       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| SDI   | 3       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| Analog IN +   | 4       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| Analog IN -   | 5       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| I (500µA)   | 6       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| +VB 24Vdc   | 7       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| -VB GND   | 8       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| Sensors with 4 - 20 mA output in 3-wire technology  |         |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| <table><tr><td>+ RS485</td><td>1</td></tr><tr><td>- RS485</td><td>2</td></tr><tr><td>SDI</td><td>3</td></tr><tr><td>Analog IN +</td><td>4</td></tr><tr><td>Analog IN -</td><td>5</td></tr><tr><td>I (500µA)</td><td>6</td></tr><tr><td>+VB 24Vdc</td><td>7</td></tr><tr><td>-VB GND</td><td>8</td></tr></table>   | + RS485 | 1 | - RS485 | 2 | SDI | 3 | Analog IN + | 4 | Analog IN - | 5 | I (500µA) | 6 | +VB 24Vdc | 7 | -VB GND | 8 | LD 510 |
| + RS485   | 1       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| - RS485   | 2       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| SDI   | 3       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| Analog IN +   | 4       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| Analog IN -   | 5       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| I (500µA)   | 6       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| +VB 24Vdc   | 7       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| -VB GND   | 8       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| Sensors with 4 - 20 mA output in 4-wire technology  |         |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| <table><tr><td>+ RS485</td><td>1</td></tr><tr><td>- RS485</td><td>2</td></tr><tr><td>SDI</td><td>3</td></tr><tr><td>Analog IN +</td><td>4</td></tr><tr><td>Analog IN -</td><td>5</td></tr><tr><td>I (500µA)</td><td>6</td></tr><tr><td>+VB 24Vdc</td><td>7</td></tr><tr><td>-VB GND</td><td>8</td></tr></table>  | + RS485 | 1 | - RS485 | 2 | SDI | 3 | Analog IN + | 4 | Analog IN - | 5 | I (500µA) | 6 | +VB 24Vdc | 7 | -VB GND | 8 | LD 510 |
| + RS485   | 1       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| - RS485   | 2       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| SDI   | 3       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| Analog IN +   | 4       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| Analog IN -   | 5       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| I (500µA)   | 6       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| +VB 24Vdc   | 7       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |
| -VB GND   | 8       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |        |

15.4.6 Two-, three- and four-wire connector pin assignments for PT100/PT1000/KTY81

|  |         |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
|--|---------|---|---------|---|-----|---|-------------|---|-------------|---|-----------|---|-----------|---|---------|---|--|
| <table><tr><td>+ RS485</td><td>1</td></tr><tr><td>- RS485</td><td>2</td></tr><tr><td>SDI</td><td>3</td></tr><tr><td>Analog IN +</td><td>4</td></tr><tr><td>Analog IN -</td><td>5</td></tr><tr><td>I (500µA)</td><td>6</td></tr><tr><td>+VB 24Vdc</td><td>7</td></tr><tr><td>-VB GND</td><td>8</td></tr></table> <p>2-wire PT100/PT1000/KTY81</p> | + RS485 | 1 | - RS485 | 2 | SDI | 3 | Analog IN + | 4 | Analog IN - | 5 | I (500µA) | 6 | +VB 24Vdc | 7 | -VB GND | 8 |  |
| + RS485  | 1       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| - RS485  | 2       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| SDI  | 3       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| Analog IN +  | 4       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| Analog IN -  | 5       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| I (500µA)  | 6       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| +VB 24Vdc  | 7       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| -VB GND  | 8       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| <table><tr><td>+ RS485</td><td>1</td></tr><tr><td>- RS485</td><td>2</td></tr><tr><td>SDI</td><td>3</td></tr><tr><td>Analog IN +</td><td>4</td></tr><tr><td>Analog IN -</td><td>5</td></tr><tr><td>I (500µA)</td><td>6</td></tr><tr><td>+VB 24Vdc</td><td>7</td></tr><tr><td>-VB GND</td><td>8</td></tr></table> <p>3-wire PT100/PT1000/KTY81</p> | + RS485 | 1 | - RS485 | 2 | SDI | 3 | Analog IN + | 4 | Analog IN - | 5 | I (500µA) | 6 | +VB 24Vdc | 7 | -VB GND | 8 |  |
| + RS485  | 1       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| - RS485  | 2       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| SDI  | 3       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| Analog IN +  | 4       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| Analog IN -  | 5       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| I (500µA)  | 6       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| +VB 24Vdc  | 7       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| -VB GND  | 8       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| <table><tr><td>+ RS485</td><td>1</td></tr><tr><td>- RS485</td><td>2</td></tr><tr><td>SDI</td><td>3</td></tr><tr><td>Analog IN +</td><td>4</td></tr><tr><td>Analog IN -</td><td>5</td></tr><tr><td>I (500µA)</td><td>6</td></tr><tr><td>+VB 24Vdc</td><td>7</td></tr><tr><td>-VB GND</td><td>8</td></tr></table> <p>4-wire PT100/1000/KTY81</p>   | + RS485 | 1 | - RS485 | 2 | SDI | 3 | Analog IN + | 4 | Analog IN - | 5 | I (500µA) | 6 | +VB 24Vdc | 7 | -VB GND | 8 |  |
| + RS485  | 1       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| - RS485  | 2       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| SDI  | 3       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| Analog IN +  | 4       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| Analog IN -  | 5       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| I (500µA)  | 6       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| +VB 24Vdc  | 7       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |
| -VB GND  | 8       |   |         |   |     |   |             |   |             |   |           |   |           |   |         |   |  |



### 15.5 Dew Point Sensor FA 500 / FA 510 (RS 485 Modbus)

**First step:** choose an unused sensor digital channel

External sensor → Settings → Sensor settings → C1

**Second step:** choose type FA 5xx

External sensor → Settings → Sensor settings → C1 → description field → Dew Point → FA 5xx

The first screenshot shows a dialog titled "Select Sensor Type". It has a grid of buttons: Flow, DewPoint (highlighted in yellow), Analog, Temperature, Energy, Particle, Pulse, Modbus, and No Sensor. At the bottom are OK, Cancel, and Custom Sensor buttons.

The second screenshot shows a dialog titled "Select Sensor DewPoint". It has a grid of buttons: FA5xx (highlighted in yellow), FA4xx, and No Sensor. At the bottom are OK and Cancel buttons.

Now the *Type FA 5xx* is to be selected for the FA 5xx series and confirmed by pressing the "OK" button.

Select the "Dew point" variant in the category menu here and confirm with "OK".

Then activate the sensor variant "FA5xx" and confirm with "OK".

External sensor → Settings → Sensor settings → C1 → text field "Name"

The screenshot shows the "Channel C1" configuration screen. At the top, it says "Type FA5xx" and "Name Dew Point". Below this is a table with columns for Record, Name, and Alarm. The table contains four rows: DewPoint, Rel.Humid., Tempera..., and Abs.Hum... The first and third rows have checkboxes checked. Below the table are OK, Cancel, and Min/Max buttons. At the bottom is a numeric keypad and a "Clr" button.

For input of a name, please enter the text field „Name“.

It is possible to enter a name with max. 24 characters.

Confirmation by pressing the OK-button.

The screenshot shows the "Channel C1" configuration screen after confirmation. The "Type" is "FA5xx" and the "Name" is "Dew Point". Below this is a table with columns for Record, Name, Value, and Alarm. The table contains four rows: DewPoint (3.58 °Ctd), Rel.Humid. (25.8908 %), Tempera... (24.40 °C), and Abs.Hum... (5.7475 g/m³). The first and third rows have checkboxes checked. Below the table are Back, Store, and Min/Max buttons. At the bottom is a numeric keypad and a "Clr" button.

The connection with the FA 5xx sensor is done after confirmation by pressing "OK".

## 15.5.1 Settings Dew point sensor FA 500 / FA 510

### 15.5.1.1 Unit selection for temperature and humidity

External sensor → Settings → Sensor settings → C1 → arrow right (2.page)

\*\*\* Channel C1 \*\*\* ~ 0.0 V  
~ 0 mA

Type FA5xx FA-Sensor  
Id:1 19.2E1 To:250msec

Unit Temperature °C °F

Unit Abs.Humidity g/m³ mg/m³

Pressure Setting

Field adjustment

Back Store More-Settings Info

Unit selection for temperature and humidity by pressing the button °C, °F, g/m³ or mg/m³.

Confirm the settings by pressing the OK button.

### 15.5.1.2 Definition of the System pressure (relative pressure value)

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Pressure Setting

\*\*\* Channel C1 \*\*\* ~ 0.0 V  
~ 0 mA

Type FA5xx FA-Sensor  
Id:1 19.2E1 To:250msec

Unit Temperature °C °F

Unit Abs.Humidity g/m³ mg/m³

Pressure Setting

Field adjustment

Back Store More-Settings Info

The system pressure is inserted by entering the values in the corresponding text field. The unit can be freely selected, selection menu is opened by pressing the corresponding button units

Confirm the settings by pressing the OK button.

Pressure Setting

Ref. Pressure 1.013 bar

Mode fixed Sensor

Sys. Pressure 4.000 bar

OK Back

bar

mg/m³ pa hpa kpa Mpa

mbar bar psi

OK Abbruch

### 15.5.1.3 Definition of Reference pressure (absolute pressure value)

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Pressure Setting → Text field Ref.Pressure

Reference pressure is the pressure for that the dew point in relaxation will be back-calculated.

Default- Value is 1013 mbar (Atm. Pressure).

Confirm the settings by pressing the **OK** button.

### 15.5.1.4 Field adjustment

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Field adjustment

Here, a one-point adjustment can be performed.

For that purpose, please enter in the text box **"Reference Value"** the new correct dew point value.



Then by pressing the **"Adjustment"** button taking over the inserted reference value.

Calibration can be put back to factory setting by pressing **"Reset"**.

For each performed calibration, the counter is increased by 1.

### 15.5.1.5 More Settings Analogue output 4-20mA

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → More-Settings → 4-20mA

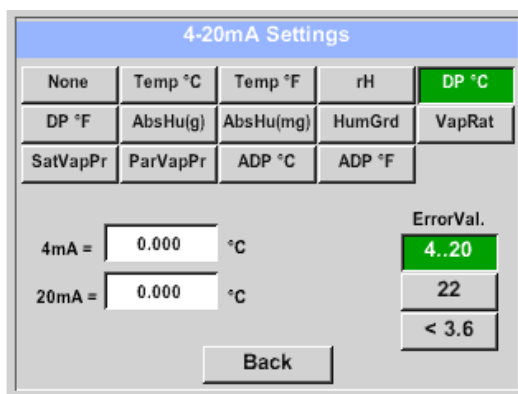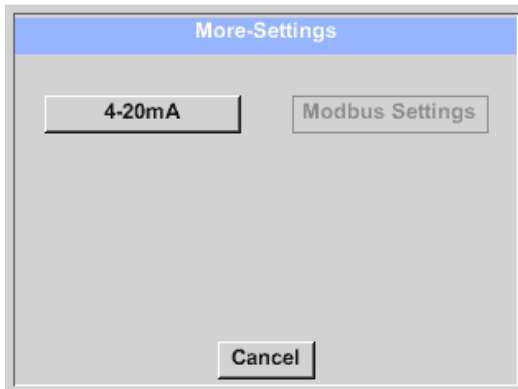

This menu allows the adjustment / assignment of the measurement value and the scaling of the analogue output.

Selection of the measurement value by selecting the appropriate measured value key in this example, "**DP °C**" for dew point °Ctd.

In text fields "**4mA**" and "**20mA**" the appropriate scaling values are entered, here from -80° Ctd (4mA) to -20° Ctd (20mA).

With "**Error Val**" is determined what is the output in case of error at the analog output.

- <3.6 Sensor error / System error
- 22 Sensor error / System error
- 4..20 Output according Namur (3.8mA – 20.5 mA)  
< 4mA to 3.8 mA Measuring range under range  
>20mA to 20.5 mA Measuring range exceeding

### 15.6 Flow sensor of type VA 5xx / VD500 (RS 485 Modbus)

**First step:** choose an unused sensor digital channel

External sensor → Settings → Sensor settings → C1

**Second step:** choose type VA 5xx

External sensor → Settings → Sensor settings → C1 → Type description field → VA 5xx

The first screenshot shows the 'Select Sensor Type' dialog. It has a title bar 'Select Sensor Type' and a yellow button labeled 'Flow'. Below it are several buttons: 'Flow' (highlighted in green), 'DewPoint', 'Analog', 'Temperature', 'Energy', 'Particle', 'Pulse', 'Modbus', and 'No Sensor'. At the bottom are 'OK', 'Cancel', and 'Custom Sensor' buttons.

The second screenshot shows the 'Select Sensor Flow' dialog. It has a title bar 'Select Sensor Flow' and a yellow button labeled 'VA5xx'. Below it are buttons: 'VA5xx' (highlighted in green), 'VA4xx', and 'No Sensor'. At the bottom are 'OK' and 'Cancel' buttons.

Now the **Type VA 5xx** is selected for the VA 5xx series and confirmed by pressing the **OK** button.

Select the **"Flow"** variant in the category menu here and confirm with **"OK"**.

Then activate the sensor variant **"VA5xx"** and confirm with **"OK"**.

External sensor → Settings → Sensor settings → C1 → Name description field

The screenshot shows the 'Name description field' dialog. It has a title bar '\*\*\* Channel C1 \*\*\*' and a yellow button labeled 'Flow Sensor'. Below it are buttons: 'Type' (set to 'VA5xx'), 'Name' (set to 'Flow Sensor'), 'Record' (with checkboxes for 'Flow', 'Consumpt.', 'Velocity', and 'Temp.'), and 'Alarm' (with checkboxes for 'Stopped', 'Stopped', 'Stopped', and 'Stopped'). At the bottom are 'OK', 'Cancel', and 'Mini/Max' buttons.

Input of a name, please enter the text field **„Name“**.

It is possible to enter a name with max. 24 characters.

Confirmation by pressing the **OK**-button.

The screenshot shows the 'Name description field' dialog. It has a title bar '\*\*\* Channel C1 \*\*\*' and a yellow button labeled 'Flow Sensor'. Below it are buttons: 'Type' (set to 'VA5xx'), 'Name' (set to 'Flow Sensor'), 'Record' (with checkboxes for 'Flow', 'Consumpt.', 'Velocity', and 'Temp.'), and 'Alarm' (with checkboxes for 'Stopped', 'Stopped', 'Stopped', and 'Stopped'). At the bottom are 'OK', 'Cancel', and 'Mini/Max' buttons.

The connection with the VA 5xx sensor is done after confirmation by pressing **"OK"**.

### 15.6.1 Settings for Flow sensor VA 5xx

External sensor → Settings → Sensor settings → C1 → arrow right (2.page)

For each text field could be the either a value or a unit be set.

Settings by entering the text field and then input a value or select the unit for the appropriate field.

In case of VA 520 and VA 570 with integrated measuring section the diameter and diameter unit field are not accessible.

All inputs/changes have to be confirmed with **“OK”**.

In case of a bidirectional sensor (VA5xxB) can be changed here by pressing the key to switches the other direction and thus the second counter reading is entered

#### 15.6.1.1 Diameter settings (only for VA 500 or VA 550)

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → diameter description field

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → diameter unit description field

##### Important:

Only for VA 500 or VA 550 possible to change the **inner diameter**

Here the **“inner diameter”** is set to 27.5mm.

Please confirm by pressing the **OK** button and go back with **arrow left (1.page)**.

After pressing the **Unit** Text fields following units are selectable.

##### Important:

The **inner diameter** should be entered as precisely as possible, because otherwise the measurement results are not correct!

There is no uniform standard for the tube **inner diameter**!

(Please inquire it from the manufacturer or measure it by your own!)

### 15.6.1.2 Gas Constant settings

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Gas Constant description field

| Air (real)  |             |             |
|---|-------------|-------------|
| Air (real)  | CO2 (real)  | H2 (real)   |
| NO2 (real)  | CO2 (188.9) | N2O (187.8) |
| N2 (296.8)  | O2 (259.8)  | NG (446.0)  |
| Ar (208.0)  |             |             |
| <input type="button" value="OK"/> <input type="button" value="Cancel"/> |             |             |

All gases marked in blue and with (real) have been a real gas calibration curve stored in the sensor.

Select the gas you require and confirm selection by pressing **OK** button.

#### Attention:

**Reference temperature and reference pressure (factory setting 20 °C, 1000 hPa):**

**All volume flow values (m<sup>3</sup>/h) and consumption values indicated in the display are related to 20 °C, 1000 hPa (according to ISO 1217 intake condition)**

**0 °C and 1013 hPa (= standard cubic meter) can also be entered as a reference.**

**Do not enter the operation pressure or the operation temperature under reference conditions!**

### 15.6.1.3 Definition of the reference conditions

Here, the desired measured media reference conditions for pressure and temperature can be defined

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Ref. Pressure description field

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Ref. Pressure Unit description field

The left screenshot shows the 'Ref. Pressure' configuration screen. It features a numeric keypad with the value '1000' displayed. Below the keypad are 'OK' and 'Cancel' buttons. The right screenshot shows the unit selection screen for pressure, with 'mbar' highlighted in a yellow box. Below the unit selection are 'OK' and 'Cancel' buttons.

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Ref. Temp. description Field

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Ref. Temp. Unit description Field

The left screenshot shows the 'Ref. Temp.' configuration screen. It features a numeric keypad with the value '20' displayed. Below the keypad are 'OK' and 'Cancel' buttons. The right screenshot shows the unit selection screen for temperature, with '°C' highlighted in a yellow box. Below the unit selection are 'OK' and 'Cancel' buttons.

### 15.6.1.4 Definition Unit of flow and velocity

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Flow description Field

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Velocity description Field

The left screenshot shows the flow unit selection screen. It displays a grid of various flow units, with 'm³/h' highlighted in a yellow box. Below the grid are 'OK' and 'Cancel' buttons. The right screenshot shows the velocity unit selection screen. It displays a grid of various velocity units, with 'm/s' highlighted in a yellow box. Below the grid are 'OK' and 'Cancel' buttons.



### 15.6.1.5 Definition consumption counter value and consumption unit

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Count Val. description Field

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Count Val. Unit description Field

The top screenshot shows the 'Consumption' screen with a yellow box around the '4589' value in the 'Count Val.' field. Below it is a numeric keypad with digits 1-9 and 0, and 'OK' and 'Cancel' buttons.

The bottom screenshot shows the 'Count Val. Unit' field with 'm³' selected. Below it is a grid of unit options: m³, Nm³, ltr, Nltr, cf, SCF, kg, kWh, and several empty boxes. 'OK' and 'Cancel' buttons are at the bottom.

The sensor allows taking over a starting counter value. Inserting the value by entering the "*Count. Val.*" text field.

In the Count. Val. Unit field different units could be used. Selection by activation of the "*Count. Val. Unit*" text field

In case the counter value unit will be changed only the consumption counter value will be recalculated to the appropriate unit.

Selection to confirm selection by pressing *OK* button.

The left screenshot shows the 'Channel C1' settings screen. The 'Type' is 'VA5xx'. The 'Count.Val' field has the value '0'. The 'Unit' is 'm³'. The 'Dir' field is empty.

The right screenshot shows the same screen, but the 'Count.Val' field now has the value '323'. A green arrow points to the 'Dir' field, which now contains a green right-pointing arrow.


Shift key Counter reading for VA5xxB

#### Remark:


After confirmation with *OK*, the font is black again and the values and settings are accepted

### 15.6.1.6 Settings analogue output 4-20mA of VA 5xx

External sensor → Settings → Sensor settings → C1 → → arrow right (2.page) → More-Settings → 4-20mA Ch1

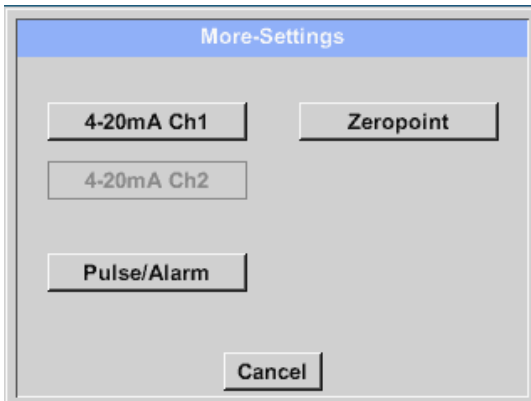


This menu allows the adjustment / assignment of the measurement value and the scaling of the analogue output by pressing the "4-20mA Ch1" button.

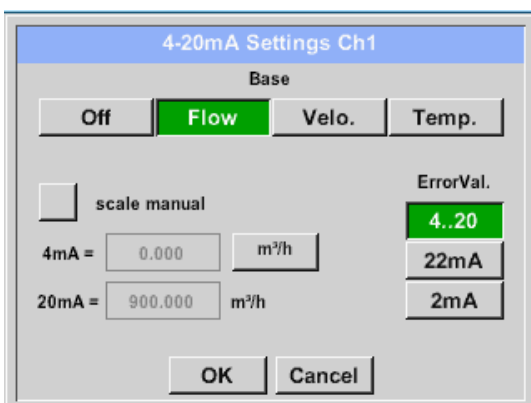

Selection of the analogue output measurement value by activating the appropriate measured value key in this example, "Flow".

Possible outputs are flow, velocity and temperature. In case of no use, please select "Off".

The analogue output scaling have to possibilities, automatic scaling (default) and a manual scaling by the user. Auto scaling is based on the calibration settings, means 4mA is set to zero and the 20mA value is based on the max. settings here 900m³/h

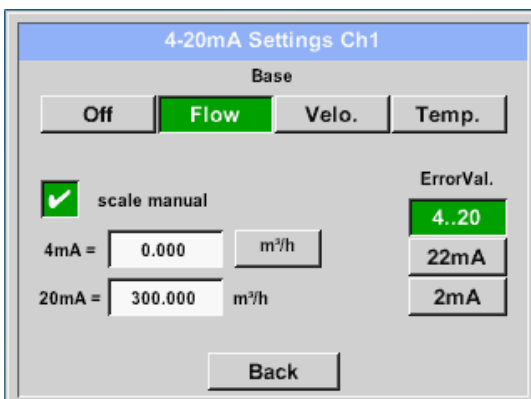

A "manual scaling" needs an activation of the "scale manual" button.

In text fields "4mA" and "20mA" the appropriate scaling values are entered, here from zero m³/h (4mA) to 300 m³/h (20mA).

With "Error Val" it is determined what is the output in case of an error at the analogue output.

- 2 mA Sensor error / System error
- 22 mA Sensor error / System error
- 4..20 Output according Namur (3.8mA – 20.5 mA)  
< 4mA to 3.8 mA Measuring range under range  
>20mA to 20.5 mA Measuring range exceeding

Inputs / changes to be confirmed with "OK" button. Return to main menu with "Back".

### 15.6.1.7 Settings Pulse / Alarm output of VA 5xx

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → More-Settings → Pulse / Alarm

The pulse output of the VA 5xx could be set functionally as pulse output or alarm output.

Function to activate by pressing either the *"Pulse"* or *"Alarm"* button.

In case of no use, please select *"none"*.

Inputs / changes to be confirmed with *"OK"* button. Return to main menu with *"Back"*.

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → More-Settings → Pulse

To set up the pulse first the unit and the measurement value have to be defined.


Unit selection by pressing *"unit"* button and choice one of the possible units *"kg"*, *"cf"*, *"ltr"* or *"m³"*.

Pulse weight setting by entering the text field *"Value"*.

Here with defined 1 pulse per m³ and with positive polarity.

With *"Polarity"* the switching state could be defined.

Pos. = 0 → 1 neg. 1 → 0



Inputs / changes to be confirmed with *"OK"* button. Return to main menu with *"Back"*.

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → More-Settings → Alarm

The first screenshot shows the 'Pulse / Alarm' menu. The 'Mode' is set to 'Alarm'. The 'Unit' is '°C'. The 'Value' is '55.000' with a tolerance of '± 2.000 °C'. The 'Limit' is set to 'High'. The 'OK' and 'Cancel' buttons are at the bottom.

The second screenshot shows the unit selection menu. The 'Unit' is '°C'. The menu includes options for 'cfm', 'ltr/s', 'm³/h', 'm/s', '°F', '°C', 'kg/s', and 'kg/min'. The 'OK' and 'Cancel' buttons are at the bottom.

The third screenshot shows the alarm value input screen. The 'Alarm' value is '55'. The screen includes a numeric keypad (0-9), a decimal point, and a minus sign. The 'OK' and 'Cancel' buttons are at the bottom.

In case of use the pulse output as alarm following definitions needs to be set:

Unit selection by pressing *“unit”* button and choice one of the possible units *“cfm”, “ltr/s”, “m³/h”, “m/s”, “°F”, “°C”, “kg/s” or “, “kg/min”*).

Alarm value setting by entering the text fields *“Value”*.

The limits *„High”* or *„Low”* defines when the alarm is activated, selecting by pressing the appropriate button

**High:** Value over limit

**Low:** Value under limit

Inputs / changes to be confirmed with *“OK”* button. Return to main menu with *“Back”*.

### 15.6.1.8 Settings ZeroPoint or Low Flow Cut off for VA 5xx

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → More-Settings → Zeropoint

The screenshot shows the 'Zero Setup' screen. At the top, 'Actual Flow' is 2.045 m³/h. Below this are two buttons: 'Adjustment' and 'Reset'. Further down, 'CutOff' is set to 0.000 m³/h. At the bottom is a 'Back' button.

The screenshot shows the 'Zero Setup' screen with 'Actual Flow' at 2.045 m³/h. The 'CutOff' value has been changed to 10.000 m³/h. The 'Adjustment' and 'Reset' buttons are still present, along with the 'Back' button at the bottom.

With these function following adjustments could be done.

#### Zeropoint:

When, without flow, the installed sensor shows already a flow value of  $> 0 \text{ m}^3/\text{h}$  herewith the zero point of the characteristic could be reset. Press the "Adjustment" key and confirm with "OK"

#### Cutoff:

With the low-flow cut off activated, the flow below the defined "LowFlow Cut off" value will be displayed as  $0 \text{ m}^3/\text{h}$  and not added to the consumption counter.

For inserting low flow cutoff value activate the text field "CutOff" and insert the required value, here 10.

With the Reset" button all entries could be set back to zero.

Inputs / changes to be confirmed with "OK" button. Return to main menu with "Back".

## 15.7 Type Modbus

### 15.7.1 Selection and activation of Sensor-Type Modbus

**First Step: First step:** choose an unused sensor channel


External sensor → Settings → Sensor settings → C1

**Second step:** choose type Modbus

External sensor → Settings → Sensor settings → C1 → Type description field → Modbus

**Third step:** confirm with **OK**.

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Va → use

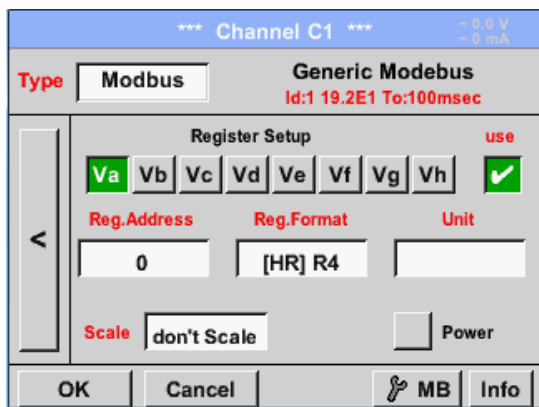


Via Modbus, it is possible to read out up to 8 Register-Values (from Input or Holding Register) of the sensor.

Selection by the Register Tabs *Va – Vh* and activation by pressing of the corresponding *Use* button.

#### 15.7.1.1 Modbus Settings

External sensor → Settings → Sensor settings → C1 → arrow right (2.page) → Modbus Settings → ID-text field

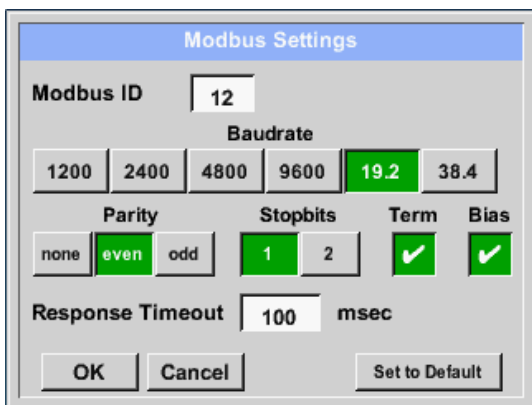

Please insert here the specified *Modbus ID* of the sensor, allowed values are *1 -247*, (e.g. here *Modbus ID = 12*)

For setting the Modbus ID on the sensor, please see sensor-datasheet.

In addition in the menu are the serial transmission settings *Baudrate*, *Stopbit*, *Paritybit* and *Timeout* time to define.

In case that the LD 510 is the end of the RS485 bus system with activating *Term*- & *Bias*- button the required termination and biasing could be activated.

Confirmation by pressing **OK** button.

For resetting to the default values please press *Set to Default*.

External sensor → Settings → Sensor settings → C1 → Reg. Address description field

The measurement values are kept in the registers of the sensor and can be addressed via Modbus and read by the PI 500

This requires setting the desired register addresses in the LD 510

Entering the register / data address is here in decimal with 0-65535.

#### Important:

Required is the correct *register-address*.

It should be noted that the register-number could be different to the register-address (Offset). For this, please consult the sensor data sheet.

External sensor → Settings → Sensor settings → C1 → Reg. Format description field

With the buttons *Input Register* and *Holding Register* the corresponding Modbus-register type will be selected.

The number format and transmission order of each value needs to be defined by *Data Type* and *Byte Order*. Both have to be applied in correct combination.

#### Supported Data types:

|                 |           |   |                              |    |                                 |
|-----------------|-----------|---|------------------------------|----|---------------------------------|
| <b>Datatype</b> | UI1(8b)   | = | unsigned Integer             | => | <b>0 - 255</b>                  |
|                 | I1 (8b)   | = | signed Integer               | => | <b>-128 - 127</b>               |
|                 | UI2 (16b) | = | unsigned Integer             | => | <b>0 - 65535</b>                |
|                 | I2 (16b)  | = | signed Integer               | => | <b>-32768 - 32767</b>           |
|                 | UI4 (32b) | = | unsigned Integer             | => | <b>0 - 4294967295</b>           |
|                 | I4 (32b)  | = | signed Integer               | => | <b>-2147483648 - 2147483647</b> |
|                 | R4 (32b)  | = | <b>Floating point number</b> |    |                                 |

#### Byte Order:

The size of each Modbus-register is 2 Byte. For a 32 bit value two Modbus-Register will be read out by the LD510. Accordingly for a 16bit Value only one register is read.

In the Modbus Specification, the sequence of the transmitted bytes is not defined clearly. To cover all possible cases, the byte sequence in the LD 510 is adjustable and must adapted to the respective sensor. Please consult here for the sensor datasheet.

e.g.: High byte before Low Byte, High Word before Low Word etc.

Therefore, the settings have to be made in accordance to the sensor data sheet.

**Example:**

Holding Register - UI1(8b) - Value: 18

Selection Register Type *Holding Register*,  
Data Type *UI1(8b)* und Byte Order *A / B*

|       | HByte | LByte |
|-------|-------|-------|
| 18 => | 00    | 12    |

| Data Order | 1. Byte | 2. Byte |
|------------|---------|---------|
| A          | 00      | 12      |
| B          | 12      | 00      |

Holding Register – UI4(32) - Value: 29235175522 → AE41 5652

Selection Register Type *Holding Register*,  
Data Type *UI1(32b)* und Byte Order *A-B-C-D*

|                | HWord |       | LWord |       |
|----------------|-------|-------|-------|-------|
|                | HByte | LByte | HByte | LByte |
| 29235175522 => | AE    | 41    | 56    | 52    |

| Data Order | 1.Byte | 2.Byte | 3.byte | 4.Byte |
|------------|--------|--------|--------|--------|
| A-B-C-D    | AE     | 41     | 56     | 52     |
| D-C-B-A    | 52     | 56     | 41     | AE     |
| B-A-D-C    | 41     | AE     | 52     | 56     |
| C-D-A-B    | 56     | 52     | AE     | 41     |

External sensor → Settings → Sensor settings → C1 → Unit- description field

By pressing the description field *Unit*, the list with the available units appear

Please select the unit by pressing the respective button e.g. *m³/h*.

For validation of the unit, please push the button *OK*

To move through the list please press the button *Page*.

In case the unit is **not** available, it is possible to create a user defined unit.

Therefore, please select one of the *User\_X* buttons.



External sensor → Settings → Sensor settings → C1 → Scale- description field

The use of this factor allows adapting the output value by the same.

By default or value = 0 no scaling is applied and displayed in the field is *don't scale*

External sensor → Settings → Sensor settings → C1 → OK

By pressing the **OK** button, the inputs are confirmed and stored.

## 15.8 Data logger Settings

External sensor → Settings → Logger settings

In the top row you can select the predefined *Time intervals* 1, 2, 5, 10, 15, 30, 60 and 120 seconds for recording.

A different, individual *Time interval* can be entered in the highlighted white description field right at the head, where the currently set *Time interval* is always displayed.

**Remark:**

The largest possible *Time interval* is 300 seconds.

**Remark:**

If more than 12 measurement data are recorded at the same time, the smallest possible time interval of the data logger is 2 seconds.

In addition, if more than 25 measurement data are recorded at the same time, the smallest possible time interval of the data logger is 5 seconds.

External sensor → Settings → Logger settings → force new Record File button

or

External sensor → Settings → Logger settings → force new Record File button → Comment description field

A new recording file will be created by pushing the *force new record file* button and a name or comment can be entered by the choice of the *Comment* description field.

#### **Important:**

If a new recording file should be created, the *force new record file* button must be activated.

Otherwise, the last applied recording file is used.

Main menu → Settings → Logger settings → timed Start button

By pushing the *timed Start* button and then the date/time description field below, the date and the start time can be set for a data logger recording.

#### **Remark:**

If the start time is activated, it will automatically be set at the current time plus a minute.

External sensor → Settings → Logger settings → timed Stop button

By pushing the *timed Stop* button and then the date/time description field below, the date and the stop time can be set for a data logger recording.


**Remark:**

If the stop time activated, it will automatically be set to the current time plus an hour.

External sensor → Settings → Logger settings → timed Start button/timed Stop button  
→ Date/Time description field


After pushing the *date/time description field* a window will appear where the yellow marked area of the time or date can always be set and changed.

External sensor → Settings → Logger settings → timed Start button/timed Stop button  
→ Date/Time description field → Cal button

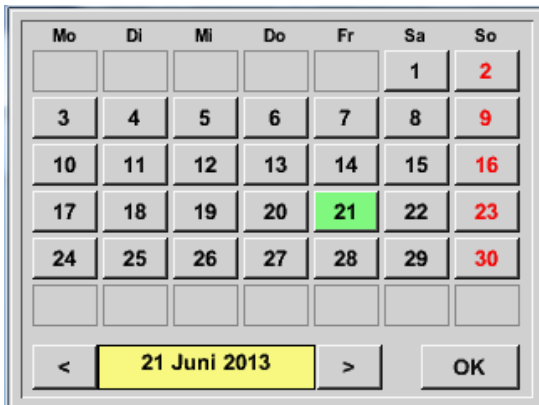

With the *Cal* button the desired date can be easily select from the calendar.


External sensor → Settings → Logger settings → Start button

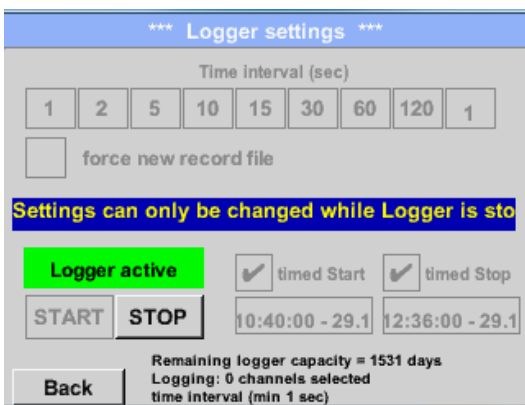

After the start and stop time activation and the created settings, the *Start* button will be pushed and the data logger is armed.

The data logger starts the recording at the set time!

External sensor → Settings → Logger settings → Start button/Stop button

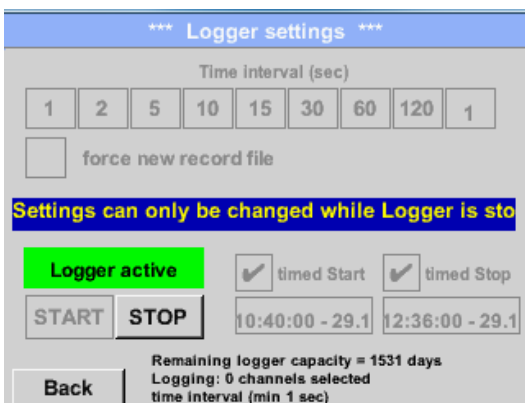

The data logger can be started without activated time settings, use the *Start* and *Stop* buttons for activate and disable.

Left below there will be shown how many values are recorded and how long there still can be recorded.

**Remark:**

The settings cannot be changed, if the data logger runs.

**Important:**

If a new recording file should be created, the *force new record file* button must be activated. Otherwise, the last applied recording file is used.

## 16 Scope of delivery

LD 500 is available either as a single unit or in a set. The set contains all the components and accessories that are protected in a rugged and shock-resistant transport case.



The following table lists the components with their order numbers.

| Description   | Order No.        |
|---|------------------|
| <b>Set LD 500 consisting of:</b>  | <b>0601 0105</b> |
| LD 500 leak detector with acoustic trumpet, and integrated camera, 100 leak tags for marking the leakages on site | 0560 0105        |
| Sound-proof headset   | 0554 0104        |
| Focus tube with focus tip   | 0530 0104        |
| Battery charger(AC adapter plug)  | 0554 0009        |
| Transportation case   | 0554 0106        |
| Helix cable for connecting the ultrasonic sound sensor  | 020 001 402      |
| Gooseneck for leak detection in hard-to-reach areas (optional)  | 0530 0105        |
| Parabolic mirror for leak detection at long distances (optional)  | 530 6            |

## 17 Appendix

In the appendix on the following pages, you will find the Declaration of Conformity for the electromagnetic compatibility and the Test Report of the Li-ion batteries used.

# KONFORMITÄTSERKLÄRUNG

## DECLARATION OF CONFORMITY

Wir CS Instruments GmbH & Co.KG  
We Gewerbehof 14, 24955 Harrislee

Erklären in alleiniger Verantwortung, dass das Produkt  
Declare under our sole responsibility that the product

**Leckage-Suchgeräte mit Kamera LD 500 / LD 510 und LD 500 UltraCam**  
Leak meters with camera LD 500 / LD 510 and LD 500 UltraCam

den Anforderungen folgender Richtlinien entsprechen:

We hereby declare that above mentioned components comply with the requirements of the following EU directives:

|   |                          |
|---|--------------------------|
| Elektromagnetische Verträglichkeit<br>Electromagnetic compatibility | 2014/30/EU<br>2014/30/EC |
| RoHS (Restriction of certain Hazardous Substances)                  | 2011/65/EC               |

Angewandte harmonisierte Normen:

Harmonised standards applied:

|                                       |   |
|---------------------------------------|---|
| EMV-Anforderungen<br>EMC requirements | <b>EN 55011: 2011-04 A2:2016 +A1:2017+A11:2020 + A2:2021</b><br><b>EN IEC 61326-1: 2021</b> |
|---------------------------------------|---|

Anbringungsjahr der CE Kennzeichnung: 22

Year of first marking with CE Label: 22

Das Produkt ist mit dem abgebildeten Zeichen gekennzeichnet.  
The product is labelled with the indicated mark.



Harrislee, den 23.04.2025

Wolfgang Blessing Geschäftsführer

Diese Erklärung beinhaltet keine Zusicherung von Eigenschaften.  
Die Sicherheitshinweise der mitgelieferten Produktdokumentation sind zu beachten.

## 17.1 Report UN 38.1



## Lithium cells or batteries test summary according to UN38.3

| <b>Battery Manufacturer:</b><br>Jauch Quartz GmbH<br>In der Lache 24<br>D-78056 Villingen-Schwenningen<br>Germany<br>+49 7720 945-0<br><a href="http://www.jauch.com">www.jauch.com</a> · <a href="mailto:info@jauch.com">info@jauch.com</a>   | <b>UN38.3 Test Lab:</b><br>Waitek Testing Group<br>(Shenzhen) Co., Ltd.<br>Liuxian 2 <sup>nd</sup> Road, Block<br>70, Bao'an District,<br>Shenzhen, China<br>Tel: +86-0755-33663308<br><a href="http://www.waitek.com.cn">www.waitek.com.cn</a><br><a href="mailto:sem@waitek.com.cn">sem@waitek.com.cn</a> |           |               |         |     |          |      |  |     |                 |      |  |     |           |      |  |     |       |      |  |     |                        |      |  |     |               |      |               |     |            |      |  |     |                  |      |               |   |
|--|---|-----------|---------------|---------|-----|----------|------|--|-----|-----------------|------|--|-----|-----------|------|--|-----|-------|------|--|-----|------------------------|------|--|-----|---------------|------|---------------|-----|------------|------|--|-----|------------------|------|---------------|---|
| <b>Description of cell or battery:</b><br>Cell/battery type: <input type="checkbox"/> Lithium metal <input checked="" type="checkbox"/> Lithium-ion<br>Cell or battery: <input type="checkbox"/> cell <input type="checkbox"/> single-cell-battery <input checked="" type="checkbox"/> battery<br>Model name: LI18650JE 2s1p<br>Physical Description: round cell battery stacked with wires and connector<br>Part-no.: 249611<br>Voltage: 7.2V<br>Capacity: 2550mAh<br>Energy: 18.36Wh<br>Lithium content: /<br>Weight of cell/battery: Approx. 100g   | <b>Test report-no.:</b><br>WTX21X06061626B<br><br><b>Date of test report:</b><br>Aug. 06, 2021  |           |               |         |     |          |      |  |     |                 |      |  |     |           |      |  |     |       |      |  |     |                        |      |  |     |               |      |               |     |            |      |  |     |                  |      |               |   |
| <b>List of tests (result: pass/fail):</b> <table border="1" data-bbox="363 1106 1038 1330"> <thead> <tr> <th>Test number</th> <th>Test item</th> <th>Result</th> <th>Remarks</th> </tr> </thead> <tbody> <tr> <td>T-1</td> <td>Altitude</td> <td>pass</td> <td></td> </tr> <tr> <td>T-2</td> <td>Thermal cycling</td> <td>pass</td> <td></td> </tr> <tr> <td>T-3</td> <td>Vibration</td> <td>pass</td> <td></td> </tr> <tr> <td>T-4</td> <td>Shock</td> <td>pass</td> <td></td> </tr> <tr> <td>T-5</td> <td>External short circuit</td> <td>pass</td> <td></td> </tr> <tr> <td>T-6</td> <td>Impact /Crush</td> <td>pass</td> <td>for cell only</td> </tr> <tr> <td>T-7</td> <td>Overcharge</td> <td>pass</td> <td></td> </tr> <tr> <td>T-8</td> <td>Forced Discharge</td> <td>pass</td> <td>for cell only</td> </tr> </tbody> </table> | Test number   | Test item | Result        | Remarks | T-1 | Altitude | pass |  | T-2 | Thermal cycling | pass |  | T-3 | Vibration | pass |  | T-4 | Shock | pass |  | T-5 | External short circuit | pass |  | T-6 | Impact /Crush | pass | for cell only | T-7 | Overcharge | pass |  | T-8 | Forced Discharge | pass | for cell only | <b>For air transportation only:</b><br>State of charge<br><input checked="" type="checkbox"/> max. 30%<br><input type="checkbox"/> not applicable |
| Test number  | Test item   | Result    | Remarks       |         |     |          |      |  |     |                 |      |  |     |           |      |  |     |       |      |  |     |                        |      |  |     |               |      |               |     |            |      |  |     |                  |      |               |   |
| T-1  | Altitude  | pass      |               |         |     |          |      |  |     |                 |      |  |     |           |      |  |     |       |      |  |     |                        |      |  |     |               |      |               |     |            |      |  |     |                  |      |               |   |
| T-2  | Thermal cycling   | pass      |               |         |     |          |      |  |     |                 |      |  |     |           |      |  |     |       |      |  |     |                        |      |  |     |               |      |               |     |            |      |  |     |                  |      |               |   |
| T-3  | Vibration   | pass      |               |         |     |          |      |  |     |                 |      |  |     |           |      |  |     |       |      |  |     |                        |      |  |     |               |      |               |     |            |      |  |     |                  |      |               |   |
| T-4  | Shock   | pass      |               |         |     |          |      |  |     |                 |      |  |     |           |      |  |     |       |      |  |     |                        |      |  |     |               |      |               |     |            |      |  |     |                  |      |               |   |
| T-5  | External short circuit  | pass      |               |         |     |          |      |  |     |                 |      |  |     |           |      |  |     |       |      |  |     |                        |      |  |     |               |      |               |     |            |      |  |     |                  |      |               |   |
| T-6  | Impact /Crush   | pass      | for cell only |         |     |          |      |  |     |                 |      |  |     |           |      |  |     |       |      |  |     |                        |      |  |     |               |      |               |     |            |      |  |     |                  |      |               |   |
| T-7  | Overcharge  | pass      |               |         |     |          |      |  |     |                 |      |  |     |           |      |  |     |       |      |  |     |                        |      |  |     |               |      |               |     |            |      |  |     |                  |      |               |   |
| T-8  | Forced Discharge  | pass      | for cell only |         |     |          |      |  |     |                 |      |  |     |           |      |  |     |       |      |  |     |                        |      |  |     |               |      |               |     |            |      |  |     |                  |      |               |   |

Test results in accordance with the UNITED NATIONS "Recommendations on the TRANSPORT OF DANGEROUS GOODS" Manual of Test and Criteria ST/SG/AC.10/11 Rev.6, Amend. 1, 38.3. Cell manufacturing as well as battery assembly is done under the quality assurance program of ISO9001.

This document remains valid as long as no changes, modifications or additions are made to the model(s) described in this document. The model(s) has (have) been classified according to the applicable transport regulation and the UN Manual of Test and Criteria as of the date of the certification. The model(s) must be packed, labelled and documented according to country and other international regulations for transportation.

Name / Title of Signatory / Date     Sönke Zacher / Head of Project Management     Aug. 31, 2021

Headquarters: Jauch Quartz GmbH · In der Lache 24 · 78056 Villingen-Schwenningen · Germany  
 Registry court: Freiburg HRB 602574, Managing Director: Thomas Jauch



## 17.2 Report IEC62133-2

|  |   |  |  |
|--|---|--|--|
|   | <b>Ref. Certif. No.</b><br><br><b>SG ITS-26038</b>  |  |  |
| <b>IEC SYSTEM FOR MUTUAL RECOGNITION OF TEST CERTIFICATES FOR ELECTRICAL EQUIPMENT (IECEE) CB SCHEME</b>   |   |  |  |
| <b>CB TEST CERTIFICATE</b>   |   |  |  |
| <b>Product</b><br><br><b>Name and address of the applicant</b><br><br><b>Name and address of the manufacturer</b><br><br><b>Name and address of the factory</b><br><i>Note: When more than one factory, please report on page 2</i><br><br><b>Ratings and principal characteristics</b><br><br><b>Trademark (if any)</b><br><br><b>Customer's Testing Facility (CTF) Stage used</b><br><br><b>Model / Type Ref.</b><br><br><b>Additional information (if necessary may also be reported on page 2)</b><br><br><b>A sample of the product was tested and found to be in conformity with</b><br><br><b>As shown in the Test Report Ref. No. which forms part of this Certificate</b> | Rechargeable Li-Ion Battery<br><br>Jauch Quartz GmbH<br>In der Lache 24, 78056 Villingen-Schwenningen, Germany<br><br>Jauch Quartz GmbH<br>In der Lache 24, 78056 Villingen-Schwenningen, Germany<br><br>Jauch Quartz GmbH<br>In der Lache 24, 78056 Villingen-Schwenningen, Germany<br><br><input checked="" type="checkbox"/> Additional Information on page 2<br><br>7.2V, 2550mAh, 18.36Wh<br><br><br><br>-<br><br>Li18650JE 2S1P<br><br>-<br><br>IEC 62133-2:2017<br><br>210721010GZU-001 |  |  |
| <b>This CB Test Certificate is issued by the National Certification Body</b>   |   |  |  |
| <table> <tr> <td data-bbox="220 1836 798 2027"> Intertek Testing Services (Singapore) Pte Ltd<br/> 5, Pereira Road, #06-01<br/> Asiawide Industrial Building<br/> Singapore 368025<br/><br/> Date: 30 August 2021 </td> <td data-bbox="805 1836 1452 2027"> <br/><br/> Signature: <br/> Ong Keng Chuan </td> </tr> </table>   |   | Intertek Testing Services (Singapore) Pte Ltd<br>5, Pereira Road, #06-01<br>Asiawide Industrial Building<br>Singapore 368025<br><br>Date: 30 August 2021 | <br><br>Signature: <br>Ong Keng Chuan |
| Intertek Testing Services (Singapore) Pte Ltd<br>5, Pereira Road, #06-01<br>Asiawide Industrial Building<br>Singapore 368025<br><br>Date: 30 August 2021   | <br><br>Signature: <br>Ong Keng Chuan  |  |  |

## **SALES OFFICE NORD**



CS INSTRUMENTS GmbH & Co. KG

Gewerbehof 14  
D-24955 Harrislee  
DEUTSCHLAND  
Tel.: +49 (0) 461 80 71 50 - 0  
Fax: +49 (0) 461 80 71 50 - 15

[info@cs-instruments.com](mailto:info@cs-instruments.com)

[www.cs-instruments.de](http://www.cs-instruments.de)

## **SALES OFFICE SOUTH**



CS INSTRUMENTS GmbH & Co. KG

Zindelsteiner Straße 15  
D-78052 VS-Tannheim  
DEUTSCHLAND  
Tel.: +49 (0) 7705 978 99-0  
Fax: +49 (0) 7705 978 99-20

[info@cs-instruments.com](mailto:info@cs-instruments.com)

[www.cs-instruments.de](http://www.cs-instruments.de)