


CS Instruments GmbH

Wiring FA300 with digital display

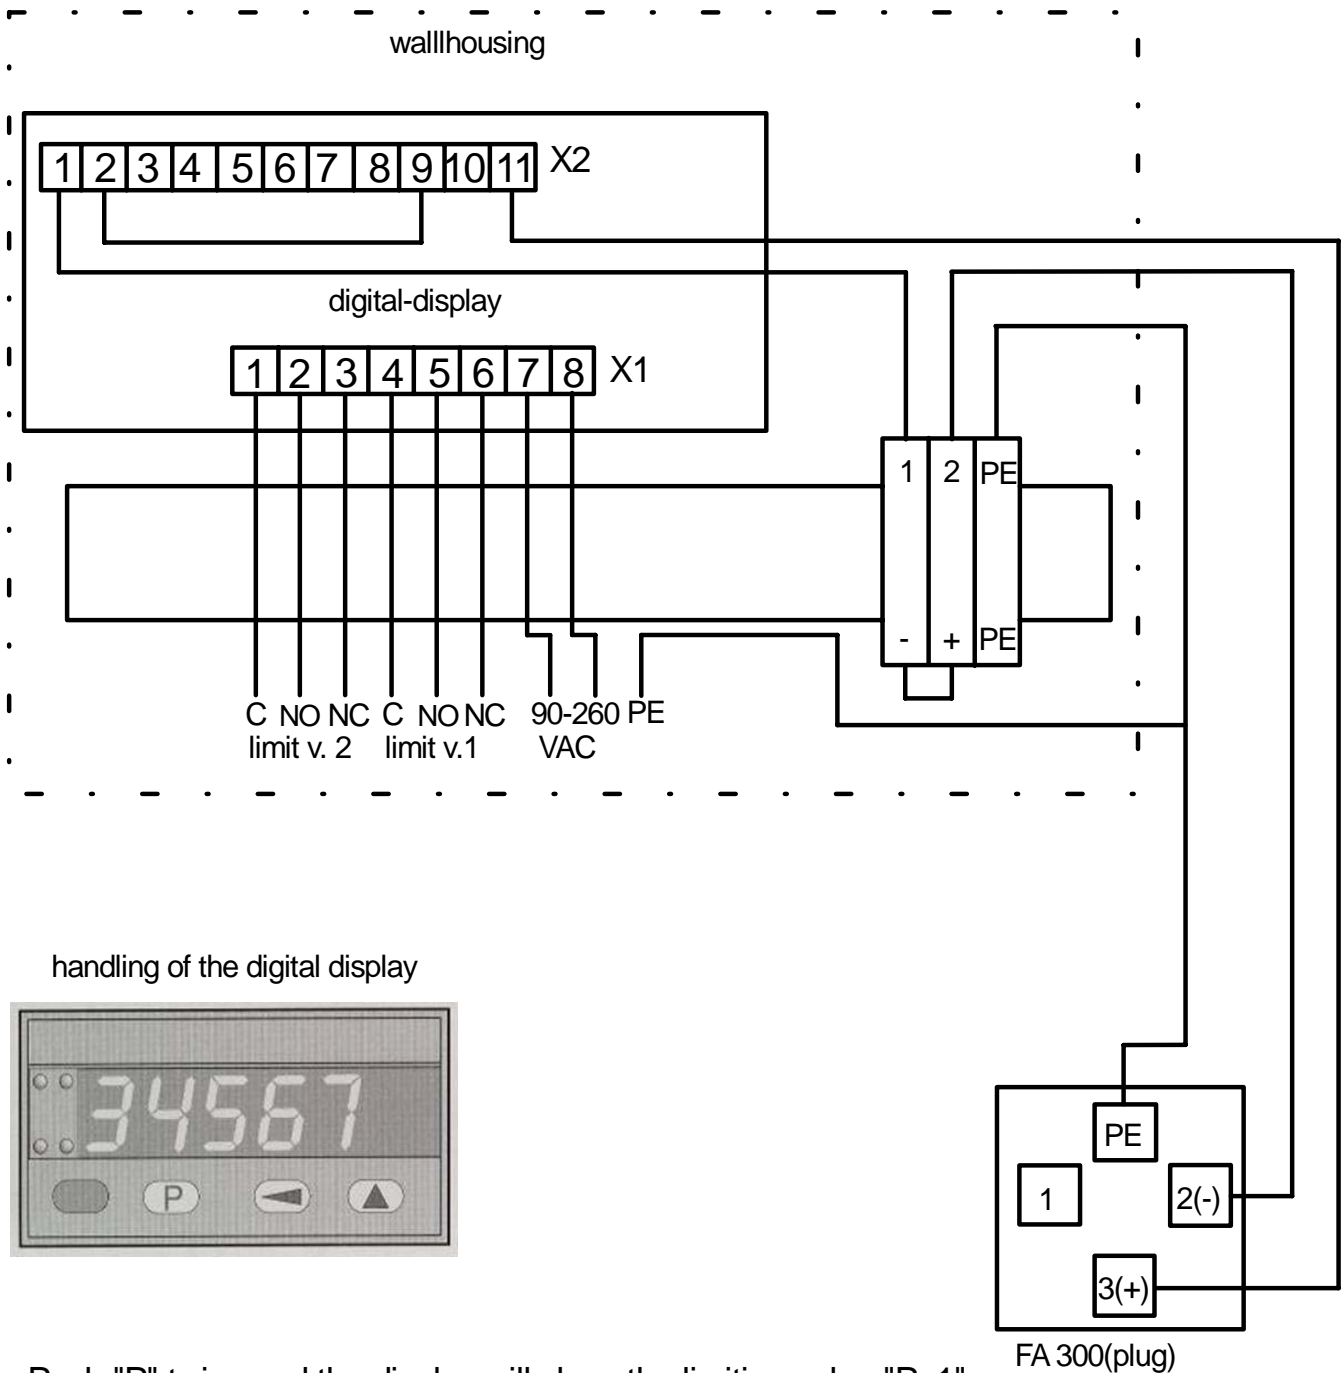

Push "P" twice and the display will show the limiting value "Pr.1" .

Choose the individual figure with the button "◀" and shift the figures with the button "▲".

With the quite left figure it is also possible to set the sign (-).

If there is not made an adjustment within 4 sec. the display jumps back into the normal mode, and the adjusted limiting values are stored.

The hysteresis is prepared for 2.0, that means that for example at a limiting value of 10°C the device switches to "OK" at 8°C again.

The frontal adjustment of the limiting values can be blocked, if on the terminal strip X2 either the clamps "6 and 11" or "7 and 9" will be bypassed.

Further information see operation instructions FA 300 and display.

