

Konfiguration of DS 300 with CS-Bus Basic

1. Step

Install the driver for the USB/ RS485 Converter
See "InstallationGuide_Driver_CS_USB_RS485_Converter.pdf"

2. Step

Enter the right COMPort (see Device manager)




3. Step

Add the devices you want to network. (Add Device)



On one side of the DS 300 you can see the allocated device numbers.

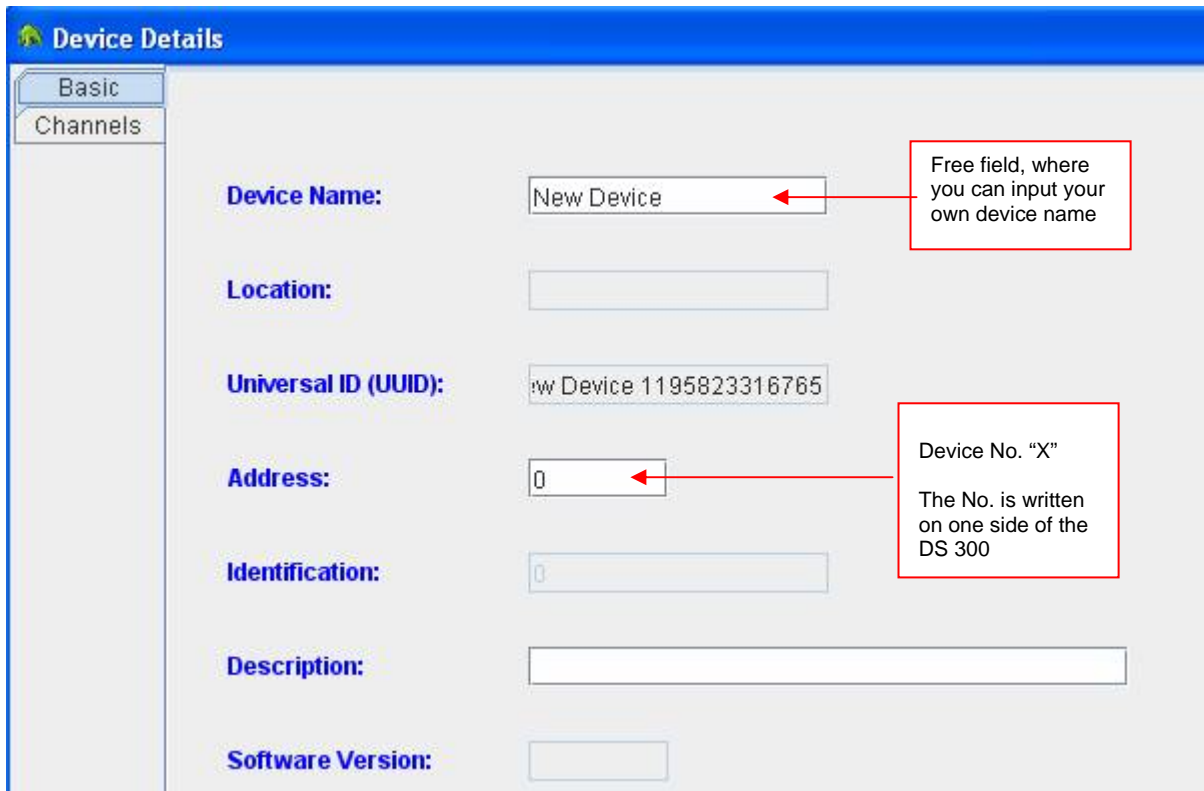

One DS 300 after the other will be displayed on the screen.

All devices are now installed, but still offline.

4. Step

Push the button "Go online" or "Automatic Discover"

