

# FA 505 – for OEM applications

The **CS dew point sensor FA 505** with 2-wire technology 4...20 mA and RS 485 Modbus output enables a reliable and long-term stable monitoring of the dew point in industrial applications such as in

- compressed air plants (refrigerating/adsorption dryers)
- granulate dryers
- medical gases
- non-corrosive gases, e.g. nitrogen



---

## FUNCTIONS

---

	Page
Introduction / Intended Use	11
Notes of safety	12
Description	12
Technical data	13
Diagram of instrument / Dimensions of instrument	14
Installation	15
Modbus interface	16
Calibration/Adjustment	18
Warranty	18
Ordering data	18
Contact	20

---

## INTRODUCTION

---

Dear Customer,

thank you for choosing the FA 505. Please read these installation and operating instructions carefully before installation and commissioning and follow our instructions. The proper functioning of the FA 505 and safe operation can only be ensured if the regulations and instructions described are strictly observed.

---

### Intended Use

---

The dew point sensor is intended for measuring the dew point or the pressure dew point in clean, dry and oil-free gases and compressed air.

The user must check whether the instrument is suitable for the selected application. It must be ensured that the medium is compatible with the wetted parts. The technical data listed in the data sheet are obligatory.

Improper handling or operation outside the technical specifications is not permitted. Claims of any kind based on improper use are excluded.



**Read these operating instructions carefully before installing the FA 505. Failure to observe the instructions contained herein, in particular the safety instructions, may result in hazards to personnel, equipment and systems..**

- The product may only be used in accordance with its intended purpose.
- Installation of the dew point sensor and maintenance work may only be carried out by trained personnel.
- Installation and service work must be carried out in a de-energized state.
- The applicable safety regulations must be observed!
- All work on the compressed air network must only be carried out in a depressurized state.
- Attention: Do not exceed the pressure range > 50 bar for the standard version.
- Observe the measuring ranges of the sensor!  
Overheating will destroy the sensors.
- Observe the permissible storage and transport temperature as well as the permissible operating temperature (e.g. protect the measuring instrument from direct sunlight).
- Opening the instrument, improper handling or use of force will void all warranty claims!
- **Important:** Before installation, briefly allow compressed air to flow off to remove condensate and particles, this will prevent soiling of the FA 505.
- Standing air leads to long measuring times

## DESCRIPTION

The FA 505 dew point sensor enables a reliable and long-term stable monitoring of the dew point in industrial applications from -20...50 °C dew point. The FA 505 features improved stability.

### Advantages:

- Extremely long-term stable
- IP 65 housing grants a reliable protection in extreme industrial conditions
- Very fast response time
- Installable in the dryer by means of G 1/2" thread, optional UNF 5/8" or NPT 1/2"
- High accuracy of  $\pm 1...2$  °Ctd
- Calibration on location and testing with CS control and calibration set (PC connection set)

### Programming via Software.

With the CS Service Software incl. USB / Modbus Adapter the Modbus settings, the scaling of the Analogue output and the assignment of the measurement values could be set.

- Analogue output 4...20 mA scalable
- Switching between °Ctd, °Ftd, % RH, °C, °F, g/m<sup>3</sup>, mg/m<sup>3</sup>, g/kg, ppm, and so on
- Calibration and adjustment
- Sensor diagnosis
- Read-out of service data







- The direct installation of the sensor is only allowed in the unpressurized state of the system
- The sensor must be tightened with a torque of 20 - 25 Nm.
- Tightness of the connection must be checked and ensured.

**Please note: CS recommends the indirect installation with measuring chamber**

**Advantage:** Easy mounting and dismounting of the probe without interruption of the line. Quick response time due to quick coupling. Optimum sensor protection.

	<p><b>Indirectly in the compressed air system</b></p> <p>Connect probe with measuring chamber to the compressed air pipe by means of a quick coupling. In case of compressed air containing oil and dirt particles a pre-filter should be installed in front of the measuring chamber. Compressed air flows continuously (at 7 bar approx. 1 l/min expanded) in the capillary pipe of the measuring chamber. The reaction times for the humidity reading are shorter than in case of a direct mounting.</p>
	<p><b>Directly in the compressed air system</b></p> <p>Screw in probe with G 1/2" thread pressure-tight in the center or at the top of the compressed air pipe. Take care that measurement is effected close to the compressed air flow. U-bend pipes or non-flowing compressed air, result in very slow reaction times for the moisture reading.</p>
	<p><b>Measurable gases</b></p> <p>In general, humidity can be measured in all non-corrosive gases. In case of measurements in corrosive gases please consult CS Instruments GmbH.</p>

The FA515 comes standard with a 4...20mA output in 2-wire technique and an RS 485 Modbus output. But it can only be used either the analogue output 4...20 mA or RS 485 Modbus output. Both outputs can not be used at the same time due to the 4...20 mA 2-wire technology (low power).

**Change from 2 wire technology to Modbus and back requires the CS Instruments service software. (Order.No.: 0554 2007)**

Before commissioning of the sensor the communication parameters

Modbus ID, Baudrate, Parity und Stop bit

must be set in order to ensure the communication with the Modbus master.

The adjustment can be done either with the CS Instruments PC service software, DS 400, DS 500 and the hand-held instrument PI 500 done.

Modbus communication default values:

- Modbus ID : 1 (1 -247)
- Baudrate: 19200 bps (1200,2400, 4800, 9600, 19200, 38400 bps)
- Parity: even (none, even, odd)
- Stopbit: 1 (1,2)

Supported are following functioncodes:

- Function code 03: Read Holding Register
- Function code 16: Write multiple Register

**Register Mapping measuring values:**

Modbus Register	Modbus Address	No.of Byte	Data Type	Description	Default Setting	Read Write	Unit /Comment
1001	1000	4	Float	Temperature		R	[°C]
1003	1002	4	Float	Temperature		R	[°F]
1005	1004	4	Float	Relative Humidity		R	[%]
1007	1006	4	Float	Dew Point		R	[°Ctd]
1009	1008	4	Float	Dew Point		R	[°Ftd]
1011	1010	4	Float	Absolute Humidity		R	[g/m³]
1013	1012	4	Float	Absolute Humidity		R	[mg/m³]
1015	1014	4	Float	Humidity Grade		R	[g/kg]
1017	1016	4	Float	Vapor Ratio (Volume)		R	[ppm]
1019	1018	4	Float	Saturation vapor pressure		R	[hPa]
1021	1020	4	Float	Partial Vapor Pressure		R	[hPa]
1023	1022	4	Float	Atmospheric DewPoint		R	[°Ctd]
1025	1024	4	Float	Atmospheric DewPoint		R	[°Ftd]

**Remark for DS400 / DS 500 / Handheld devices - Modbus Sensor Datatyp:**

„Data Type R4-32“ match with „Data Type Float“

**Modbus Settings (2001...2006)**

Modbus Register	Modbus Address	No.of Byte	Data Type	Description	Default Setting	Read Write	Unit /Comment
2001	2000	2	UInt16	Modbus ID	1	R/W	Modbus ID 1...247
2002	2001	2	UInt16	Baudrate	4	R/W	0 = 1200 1 = 2400 2 = 4800 3 = 9600 4 = 19200 5 = 38400
2003	2002	2	UInt16	Parity	1	R/W	0 = none 1 = even 2 = odd
2004	2003	2	UInt16	Number of Stopbits		R/W	0 = 1 Stop Bit 1 = 2 Stop Bit
2005	2004	2	UInt16	Word Order	0xABCD	R/W	0xABCD = Big Endian 0xCDAB = Middle Endian
2006	2005	2	UInt16	Modbus Enabled	FA510: 1 FA515: 0	R/W	0 = Modbus disabled 1 = Modbus Enabled

**Analog Scaling Settings (2007...2011)**

Modbus Register	Modbus Address	No.of Byte	Data Type	Description	Default Setting	Read Write	Unit /Comment
2007	2006	4	UInt32	Output Value	4	R/W	0 = 4-20mA disabled 1 = Temperature [°C] 2 = Temperature [°F] 3 = relative Humidity [%] 4 = DewPoint [°C] 5 = DewPoint [°F] 6 = Absolute Humidity [g/m3] 7 = Absolute Humidity [mg/m3] 8 = Humidity Grade [g/kg] 9 = Vapor Ratio [ppm] 10 = Saturation Vapor Pressur [hPa] 11 = Partial Vapor Pressure [hPa] 12 = Atmospheric DewPoint [°C] 13 = Atmospheric DewPoint [°F]
2009	2008	4	float	4mA Scale Low	-80	R/W	
2011	2010	4	float	20mA Scale High	20	R/W	

Modbus installation, Modbus settings and further information refer to the manual CS Instruments "**Modbus Installation and Operating Instructions FA 5xx sensors**"



**From the manufacturer**

According to DIN ISO certification of the measuring instruments we recommend regular calibration and, if necessary, adjustment of the instrument by the manufacturer. The calibration cycles should fit your internal scheme. In the course of the DIN ISO certification, we recommend for FA 505 a calibration cycle of one year.

**WARRANTY**

If you have reason for complaint, we will of course repair any faults free of charge if it can be proven that they are manufacturing faults. The fault should be reported immediately after it has been found and within the warranty time guaranteed by us. Excluded from this warranty is damage caused by improper use and non-adherence to the instruction manual.

The warranty is also cancelled once the measuring instrument has been opened provided this is not described in the instruction manual for maintenance purposes. This is also the case if the serial number has been changed, damaged or removed.

The warranty time for FA 505 is 12 months for the instruments and 6 months for accessories if no other terms are agreed upon. Warranty services do not extend the warranty time.

If in addition to the warranty service necessary repairs, adjustments or similar are carried out, the warranty services are free of charge but there is a charge for other services such as transport and packing costs. Other claims, especially those for damage occurring outside the instrument are not included unless responsibility is legally binding.

**After-sales service after the warranty time has elapsed**

We are, of course, there for you after the warranty time has elapsed. In the case of function faults please send us your measuring instrument with a brief description of the defect. Please also indicate your telephone number so that we can contact you if necessary.

**ORDERING DETAILS**

<i>Order no.</i>	<i>Description</i>
0699.0505-4	FA 505 dew point sensor (-20...50 °Ctd) analogue output 4-20mA
0699.0505-5	FA 505 dew point sensor (-40...30 °Ctd) analogue output 4-20mA
0699.0505-6	FA 505 dew point sensor (-50...20 °Ctd) analogue output 4-20mA
0699.0505-7	FA 505 dew point sensor (-60...30 °Ctd) analogue output 4-20mA
0699.0505-8	FA 505 dew point sensor (-80...20 °Ctd) analogue output 4-20mA
0699.0505-10	FA 505 dew point sensor (-20...50 °Ctd) Modbus output
0699.0505-11	FA 505 dew point sensor (-40...30 °Ctd) Modbus output
0699.0505-12	FA 505 dew point sensor (-50...20 °Ctd) Modbus output
0699.0505-13	FA 505 dew point sensor (-60...30 °Ctd) Modbus output
0699.0505-14	FA 505 dew point sensor (-80...20 °Ctd) Modbus output
0699.3390	Standard measuring chamber for compressed air up to 16 bar
0699.3690	Measuring chamber for atmospheric dew point
0554 2007	CS Service Software for FA/VA sensors incl. PC connection set, USB connection and interface adapter to the sensor
0554.0002	Control and calibration set 11.3 % RH
0554.0004	Control and calibration set 33 % RH
0554.0005	Control and calibration set 75.3 % RH
0553.5051	Connection cable for FA 505, length: 5 m
0553.5053	Connection cable for FA 505, length: 10 m
3200.0003	Precision calibration at 0 °Ctd and 10 °Ctd incl. ISO certificate
0699.3396	Precision calibration at -40 °Ctd incl. ISO certificate

# KONFORMITÄTSERKLÄRUNG

DECLARATION OF CONFORMITY

Wir CS Instruments GmbH  
 We Gewerbehof 14, 24955 Harrislee

Erklären in alleiniger Verantwortung, dass das Produkt

Declare under our sole responsibility that the product

**Feuchtesensoren FA 505 / UDM515**

Dew point sensors FA 505 / UDM 515

den Anforderungen folgender Richtlinien entsprechen:

We hereby declare that above mentioned components comply with requirements of the following EU directives:

Elektromagnetische Verträglichkeit Electromagnetic compatibility	2014/30/EU 2014/30/EC
RoHS (Restriction of certain Hazardous Substances)	2011/65/EC

Angewandte harmonisierte Normen:

Harmonised standards applied:

EMV-Anforderungen EMC requirements	<b>EN 55011: 2011-04</b> <b>EN 61326-1: 2013-07</b>
---------------------------------------	--


Anbringungsjahr der CE Kennzeichnung: 16

Year of first marking with CE Label: 16

Das Produkt ist mit dem abgebildeten Zeichen gekennzeichnet.  
 The product is labelled with the indicated mark.



Harrislee, den 02.09.2020

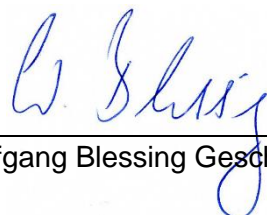

Wolfgang Blessing Geschäftsführer

**Geschäftsstelle Süd / Sales Office South**

Zindelsteiner Str. 15  
D-78052 VS-Tannheim

Tel.: +49 (0) 7705 978 99 0

Fax: +49 (0) 7705 978 99 20

Mail: [info@cs-instruments.com](mailto:info@cs-instruments.com)

Web: <http://www.cs-instruments.com>

**Geschäftsstelle Nord / Sales Office North**

Gewerbehof 14  
D-24955 Harrislee

Tel.: +49 (0) 461 807 150 0

Fax: +49 (0) 461 807 150 15

Mail: [info@cs-instruments.com](mailto:info@cs-instruments.com)

Web: <http://www.cs-instruments.com>