
DS 500 - Intelligent chart recorder for compressed air and gases

Measurement - control - indication - alarm - recording - evaluation



Advantages at a glance:

- Clear layout: 7" colour screen with touch panel...
- Versatile: 4, 8 or 12 sensor inputs. Up to 12 analogue sensors or up to 40 digital sensors (Modbus RTU).
- Suitable for industrial applications: Metal housing IP 65 or panel mounting...
- Data available through world wide web: Network-compatible and remote transmission via webserver
- Mathematical function: for internal calculations
- Totaliser function: for analogueue signals
- · ...saves time and costs during installation
- Simple: DS 500 provides the power supply for the sensors

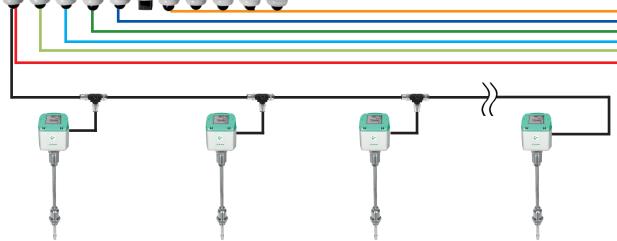

DS 500 - The intelligent chart recorder of the next generation

Recording of the measured data, indication on a big colour screen, alerting, storage, not to mention remote read-out via webserver... this is all possible with DS 500.

All measured values, measurement curves and threshold value exceedances are indicated. The curve progressions from the beginning of the measurement can be viewed by an easy slide of the finger.

The big difference to ordinary paperless chart recorders reveals in the easy initiation and in the evaluation of the measured data. All sensors are identified directly and powered by DS 500. Everything is matched and tuned.

Mathematical function for internal calculations, e.g. the typical figures of a compressed air system:

- Costs in € per generated m³ air
- kWh/m³ generated air
- Consumption of single lines including summation

Totaliser function for analogueue signals (e.g. 0/4...20 mA, 0...10 V). In case of third-party sensors which e.g. only give a 4...20 mA signal for the actual flow in m³/h, a total counter reading in m³ can be generated by means of the totaliser function.

No time consuming studying of the instruction manual... this saves time. Internal voltage supply of all sensors, no wiring of external mains units ... this saves additional costs.

Chart recorder



Flow meters for compressed air and gases

- Installation and removal under pressure via standard 1/2" ball valve
- A safety ring prevents the uncontrolled ejection in case of installation/removal under pressure
- Usable for different gases: Compressed air, nitrogen, argon, CO2, oxygen...



Dew point sensors

- Extremely stable in the long term
- Quick adaption time
- Large measuring range (-80° to +20 °Ctd)
- For all dryers: (Adsorption dryers, membrane dryers and refrigeration dryers)
- Easy installation under pressure via the measuring chamber with quick coupling



Pressure sensors

- Large selection of pressure sensors with different measuring ranges for each measuring purpose
- Quick installation under pressure by quick coupling
- Pressure probe 0-10/16/40/100/250/400 bar overpressure
- Pressure probe -1 to +15 bar (underpressure/overpressure)
- Differential pressure 0...1.6 bar
- Absolute pressure 0 1.6 bar (abs)





- Large selection of temperature sensors e.g. for measurement of the ambient temperature or gas temperature
- Pt100 (2-wire or 3-wire)
- Pt1000 (2-wire or 3-wire)
- Temperature sensors with measuring transducer (4-20 mA output)



Temperature sensors



- Monitoring of compressed air quality according to ISO 8573
- Residual oil, particles, residual moisture



Compressed air quality measurement



- CS PM5110 current/effective power meters for panel mounting
- External current transformers for encompassing the phases (max. 2000 A)
- Measures kW, kWh, cos phi, kVar, kVA
- Data transfer DS 500 via Modbus



Current/effective power meters

By means of the intelligent chart recorder DS 500, all measuring data of a compressor station can be recorded, indicated and evaluated.

At 12 freely assignable sensor inputs, all our sensors can be connected as well as any optional third-party sensors and meters with the following signal outputs:


4-20 mA, 0-20 mA I 0-1 V / 0-10 V / 0-30 V I Pt 100 (2- or 3-wire), Pt 1000 (2- or 3-wire), pulse outputs (e.g. of gas meters) I Modbus protocol.

Measured values, statistics, curves with the 7" colour screen with touch panel

A1 Co	ompressed Air	A2 Co	mpressed Air	А3 с	ompressed Air	A4 C	ompressed Air
☑ A1a ☑	237.7 m³/h 34106 m³	☑ A2a ☑		☑ A3a ☑	537.0 m³/h 155132 m³	☑ A4a ☑	254.7 m³/h 55234063 m³
B1	Nitrogen	B2	Nitrogen	B3	Nitrogen	B4	Nitrogen
☑ B1a ☑	337.7 ltr/min 27734 ltr	☑ B2a ☑	657.7 ltr/min 240041 ltr	☑ B3a	15.7 ltr/min 34131 ltr	☑ B4a ☑	237.7 ltr/min 235322 ltr
C1	Oxygen	C2	Oxygen	C3	Oxygen	C4	Oxygen
☑ C1a	17.7 ltr/min 4080 ltr	☑ C2a	37.7 ltr/min 234108 ltr	☑ C3a	223.7 ltr/min 3749 ltr	☑ C4a	75.8 ltr/min 43584 ltr
Zurück	0		Virtuelle l		Alarm Lg.st		Inte 24.03.2014 16:41:52

Actual measured values


All measured values can be seen at a glance. Threshold value exceedances are indicated in red color. A "measuring site name" can be allocated to each sensor.

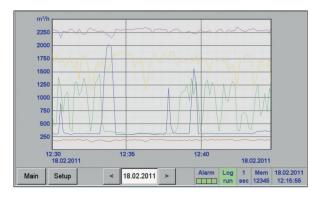

Graphic display


This display replaces the former evaluation of ordinary paper chart recorders and offers lots of advantages. The time axis can be moved by a finger slide.

The "zoom function by finger movement" which enables an analysis of peak values is unique.

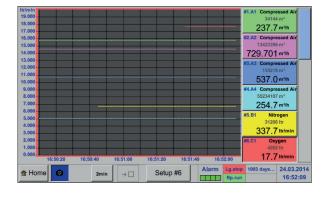

Actual measured values and graphic

Additionally to the measurement curves, the current measured values are indicated as well.

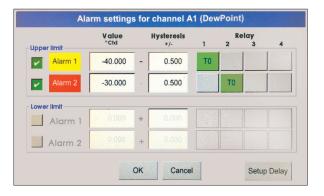

Adjustment of the alarm relays

Each one of the four alarm relays can be allocated individually to a connected sensor. The alarm thresholds and the hysteresis can be freely adjusted.

New: It is possible to set an alarm delay for each alarm relay so that the relay is only triggered after that period of time.

Chart recorder



Technical data of the DS 500

TECHNICAL DATA DS 500

Voltage supply for sensor:

Interfaces:

Dimensions of housing: 280 x 170 x 90 mm, IP 65

Connections: 18 x PG for sensors and supply

Version panel mounting: Cutout panel 250 x 156 mm

Weight: 3,5 kg

Material: Die cast metal, front screen polyester

Sensor inputs:

• 4/8/12 sensor inputs for analogueue and digital sensors; freely allocatable. See options

Digital CS sensors for dew point and consumption with SDI interface FA/VA series,

Digital third-party sensors RS 485 / Modbus RTU, other bus systems realizable on request.

Analogue CS Sensors for process to proceed to the process of the process for process to the process for process fo

Analogue CS Sensors for pressure, temperature, clamp-on ammeters pre-configured.
 Analogue third party conserv 0/4, 20 mA 0, 1/10/20 V pulse. Pt 100 / Pt 1000 KTV.

Analogue third-party sensors 0/4...20 mA, 0...1/10/30 V, pulse, Pt 100 / Pt 1000, KTY

2 integrated mains units each max. 24 VDC, 25 W.

Outputs: 4 relays (changeover contact 230 VAC, 6 A), alarm management, relays freely programmable, collective alarm

Analog output, pulse in case of sensors with own signal output looped, such as e.g. VA/FA series

USB stick, Ethernet / RS 485 Modbus-RTU / TCP, SDI other bus systems on request, webserver optional

24 VDC, max. 130 mA per sensor, integrated mains unit max. 24 VDC, 25 W. In case of version 8/12 sensor inputs,

Memory card: Memory size 16 GB Micro SD card

Power supply: 100...240 VAC / 50-60 Hz, special version 24 VDC

Colour screen: 7" touch panel TFT transmissive, graphics, curves, statistics

Accuracy: See sensor specifications

Operating temperature: 0...50 °C
Storage temperature: -20...70 °C
Optional: Web server

DESCRIPTION	ORDER NO.
DS 500 - intelligent chart recorder in basic version (4 sensor inputs)	0500 5000
Option: 4 additional sensor inputs for DS 500 V2	Z500 5501
Option: 8 additional sensor inputs for DS 500 V2	Z500 5502
Option: Integrated webserver	Z500 5003
Option: version for panel mounting	Z500 5006
Option: Power supply 24 VDC (instead of 100240 VAC)	Z500 5007
Option: "Mathematics calculation function" for 4 freely selectable channels, (virtual channels): addition, subtraction, division, multiplication	Z500 5008
Option: "Totaliser function for analogue signals"	Z500 5009
External Gateway Profibus for connecting an integrated RS 485 interface	Z500 3008
CS Basic – data evaluation graphically and in tabular form - reading of the measured data via USB or Ethernet, license for 2 workstations	0554 8040
CS Network – energy monitoring with client/server solution (max. 20 measured values of different sensors/devices)	0554 8041
CS Network – energy monitoring with client/server solution (max. 50 measured values of different sensors/devices)	0554 8042
CS Network – energy monitoring with client/server solution (max. 100 measured values of different sensors/devices)	0554 8043
CS Network - Energy Monitoring with Client / Server Solution (max. 200 measured values of different sensors / devices)	0554 8044

INPUT SIGNALS					
Current signals Internal or external power supply Measuring range Resolution Accuracy Input resistance	(020 mA/ 420 mA) 020 mA 0.0001 mA ± 0.03 mA ± 0.05 % 50 Ω				
Voltage signal Measuring range Resolution Accuracy Input resistance	(01 V) 01 V 0.05 mV $\pm 0.2 \text{ mV} \pm 0.05 \%$ $100 \text{ k}\Omega$				
Voltage signal Measuring range Resolution Accuracy Input resistance	(010 V / 30 V) 010 V 0.5 mV $\pm 2 \text{ mV} \pm 0.05 \%$ $1 \text{ M}\Omega$				
RTD Pt 100 Measuring range Resolution Accuracy	-200850 °C 0.1 °C ± 0.2 °C (-100400 °C) ± 0.3 °C (further range)				
RTD Pt 1000 Measuring range Resolution Accuracy	-200850 °C 0.1 °C ± 0.2° (-100400 °C)				
Pulse Measuring range	Min pulse length 500 μs frequency 01 kHz max. 30 VDC				